

# Service Manual


Stereo Integrated Amplifier

Amplifier

## SU-Z990

Color

(K) ... Black Type

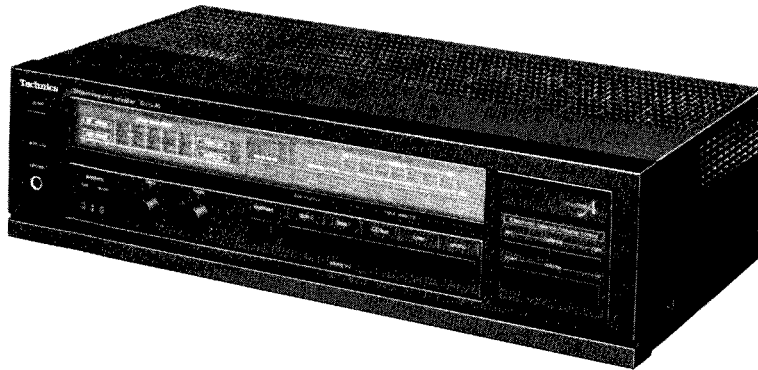

Color	Area
(K)	[E] . . . . . Continental Europe
(K)	[EH] . . . . . Holland
(K)	[EB] . . . . . Belgium
(K)	[EF] . . . . . France
(K)	[EK] . . . . . United Kingdom
(K)	[EG] . . . . . F.R. Germany
(K)	[Ei] . . . . . Italy
(K)	[XL] . . . . . Australia
(K)	[XA] . . . . . Asia, Latin America, Middle Near East, Africa & Oceania

SU-Z990

## SPECIFICATIONS

(DIN 45 500)

### ■ AMPLIFIER SECTION

40 Hz~20 kHz continuous power output both channels driven	2 × 85W (8Ω)
1 kHz continuous power output both channels driven	2 × 100W (8Ω)
Total harmonic distortion	
rated power at 40 Hz~20 kHz	0.09% (8Ω)
rated power at 1 kHz	0.05% (8Ω)
half power at 1 kHz	0.03% (8Ω)
Intermodulation distortion	
rated power at 60 Hz: 7 kHz=4:1, SMPTE, 8Ω	0.09%
Power bandwidth	
both channels driven, -3 dB	10 Hz~20 kHz (8Ω, 0.09%)
Damping factor	40 (8Ω)
Input sensitivity and impedance	
PHONO	2.5 mV/47kΩ
TUNER, CD/AUX	150 mV/47kΩ
TAPE 1, 2/EXT	150 mV/47kΩ
PHONO maximum input voltage (1 kHz, RMS)	140 mV
S/N	
rated power (8Ω)	
PHONO	70 dB (IHF, A: 70 dB)
TUNER, CD/AUX, TAPE 1, 2/EXT	70 dB (IHF, A: 90 dB)
Frequency response	
PHONO	RIAA standard curve ±0.8 dB (30 Hz~15 kHz)
TUNER, CD/AUX, TAPE 1, 2/EXT	10 Hz~60 kHz (-3 dB)
Tone controls	
BASS	50 Hz, +10 dB~-10 dB
TREBLE	20 kHz, +10 dB~-10 dB
Loudness control (volume at -30 dB)	50 Hz, +9 dB

Muting (using the remote-control transmitter)	--20 dB
Output voltage	
REC OUT	150 mV
Channel balance, CD/AUX 250 Hz~6,300 Hz	±1 dB
Channel separation, CD/AUX 1 kHz	50 dB
Headphones output level and impedance	670 mV/330Ω
Load impedance	
MAIN or REMOTE	8Ω~16Ω
MAIN and REMOTE	8Ω~16Ω

### ■ GENERAL

Power consumption	470W
Power supply	
For Australia and United Kingdom	AC 50 Hz/60 Hz, 240V
For continental Europe	AC 50 Hz/60 Hz, 220V
For others	AC 50 Hz/60 Hz, 110V/127V/220V/240V
Batteries	DC 3V (2 "AA" size batteries, R6 or equivalent)
Dimensions (W×H×D)	430 × 119 × 240 mm (16-15/16" × 4-11/16" × 9-7/16")
Weight	7.1 kg (15.6 lb.)

#### Note:

Total harmonic distortion is measured by the digital spectrum analyzer (H.P. 3045 system).

Specifications are subject to change without notice for further improvement.

# Technics

Matsushita Electric Trading Co., Ltd.  
P.O. Box 288, Central Osaka Japan








**NOTES :**

1. The power of the tuner and tape deck in this system are supplied through the amplifier. When servicing these components, prepare an each model or an external power supply (servicing power JIG Part No. : SZZA1058C).  
(For how to use the JIG, refer to the Service Manual of tuner.)
2. Prepare a transmitter and an amplifier when checking each model of system for its performance using the remote control.


**CONTENTS**

	<b>Page</b>		<b>Page</b>
ACCESSORIES .....	2	SCHMATIC DIAGRAM OF REMOTE CONTROL	
LOCATION OF CONTROLS .....	2, 3	TRANSMITTER .....	14
CONNECTIONS .....	4	KEY NUMBER DESCRIPTION AND DATA CODE OF	
PROTECTION CIRCUITRY .....	4	REMOTE CONTROL TRANSMITTER .....	14
BEFORE REPAIR AND ADJUSTMENT .....	4	SCHMATIC DIAGRAM .....	15 ~ 20
DISASSEMBLY INSTRUCTIONS .....	5	BLOCK DIAGRAM .....	21, 22
FUNCTION OF IC TERMINALS .....	6 ~ 8	REPLACEMENT PARTS LIST .....	23 ~ 26
(IC202, IC251, IC252, IC201)		EXPLODED VIEW .....	24 ~ 26
CIRCUIT BOARDS & WIRING CONNECTION DIAGRAM .....	9 ~ 13		

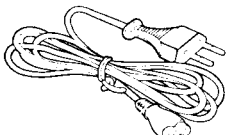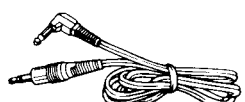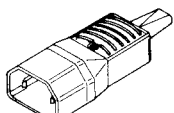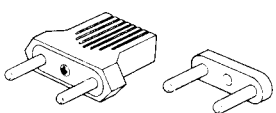**ACCESSORIES**
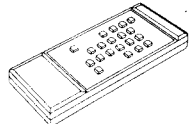
<ul style="list-style-type: none"> <li>• AC power supply cord ..... 1</li> </ul> 	<ul style="list-style-type: none"> <li>• Connection cable for remote-control ..... 1</li> </ul> 	<ul style="list-style-type: none"> <li>• Plug (SJP5219-1)</li> </ul> 	<ul style="list-style-type: none"> <li>• Plug adaptor (SJP9215)</li> </ul> 
<ul style="list-style-type: none"> <li>• Flat cable for remote-control .... 1</li> </ul> 	<ul style="list-style-type: none"> <li>• Batteries ..... 2</li> </ul> 	<ul style="list-style-type: none"> <li>• Remote-control transmitter .. 1</li> </ul>  <p>Transmitter ass'y is not supply for replacement part.</p>	

**LOCATION OF CONTROLS**

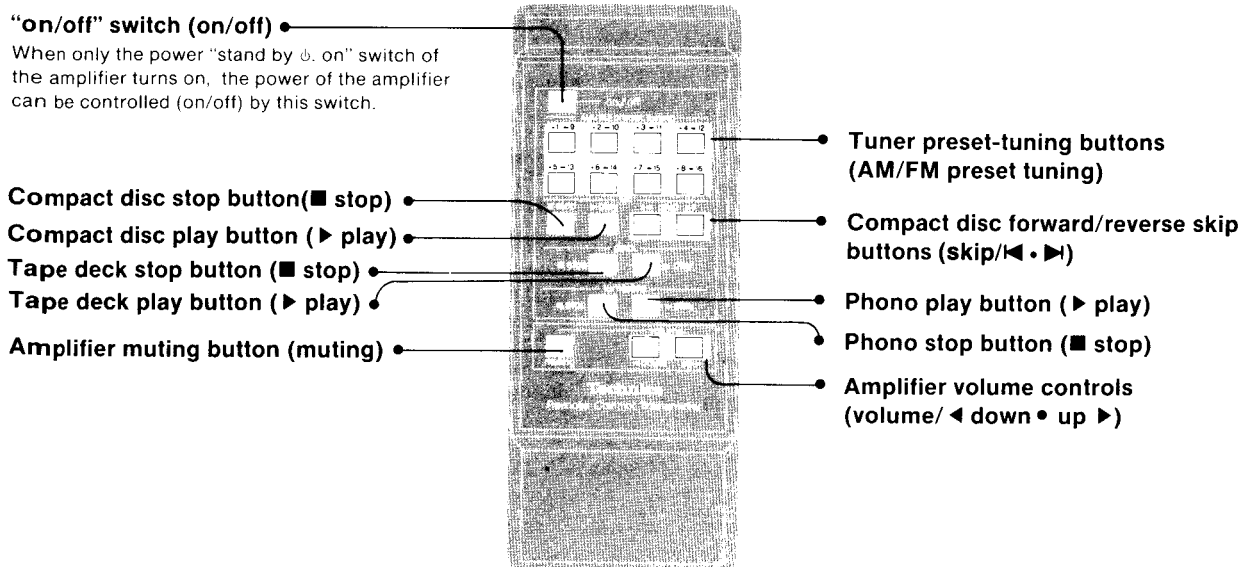

**Power "stand by" switch/indicator**

This switch turns on and off the secondary circuit power only. The unit is in the "stand-by" condition when this switch is set to the "stand by" position. Regardless of the switch setting, the primary circuit is always "live" as long as the power cord is connected to an electrical outlet.

When the power is turned on, the program source which was heard when the power was last turned off can be heard.

**Peak-power meters**

**Note:**

If speaker systems with an impedance of 8 ohms are connected, the actual value can be read directly. If, however, the impedance is 16 ohms, the actual output value is 1/2 of the indicated value.


$$\text{Actual output} = \frac{\text{indicated value} \times 8 \Omega}{\text{speaker impedance} (\Omega)}$$

**Volume/balance level indicator**


This indicator usually shows the volume level; when the balance control is pressed, however, the position of balance level is displayed for five seconds, after which the display returns again to indication of the volume level. When the amplifier muting button on the remote-control transmitter is pressed, the indicator corresponding to the maximum displayed volume level point will flash.

**Remote-control signal receptor (remote sensor)**

**Balance controls**

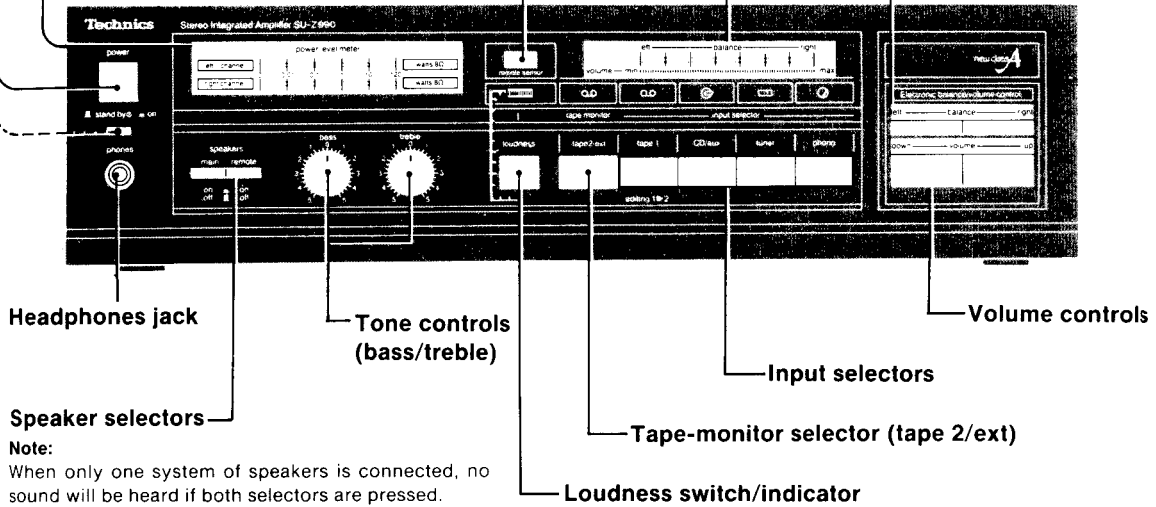


**Note:**  
When only one system of speakers is connected, no sound will be heard if both selectors are pressed.

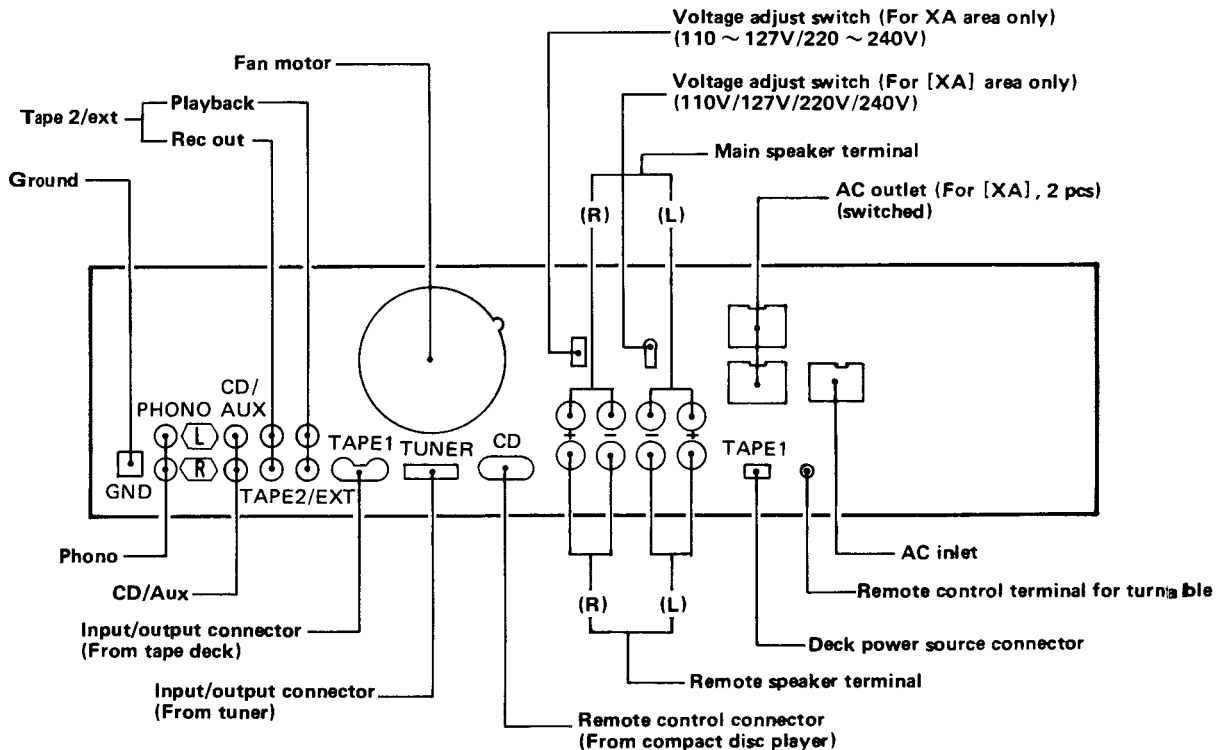

## CONNECTIONS






Connect the turntable, tuner, amplifier, cassette deck, and CD player as shown.

If the connection is wrong, normal operation will not be attained.

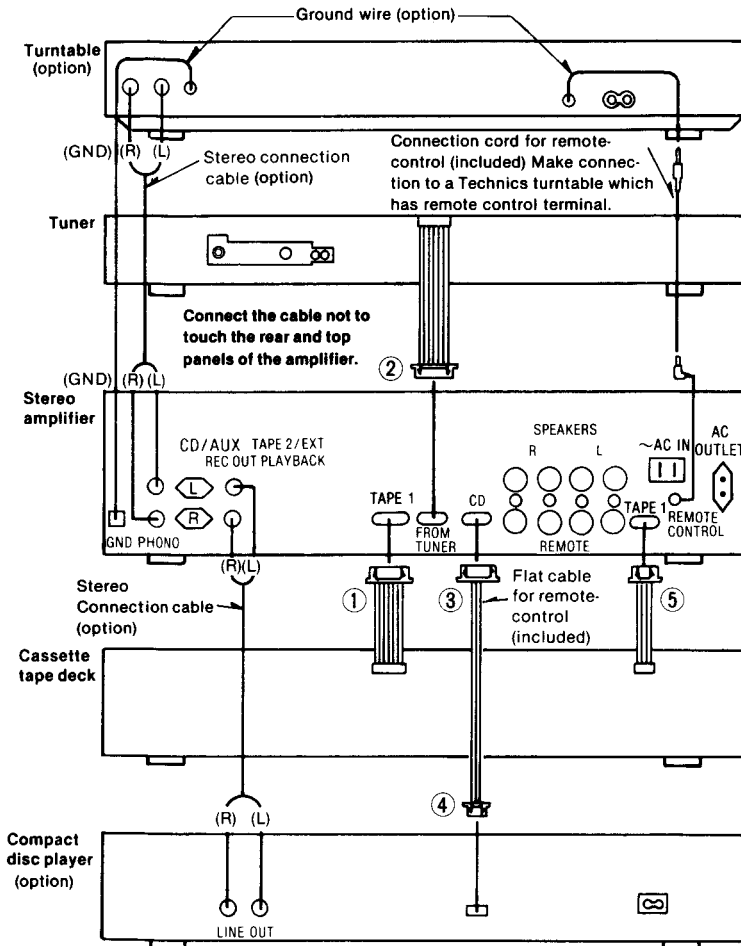

※ Flat cables for remote-control should be connected correctly. If connections are wrong, the units do not function correctly.

Tuner (ST-Z990/Z990L) and Cassette deck (RS-D225W) is not equipped with power supply. So, the amplifier shown or power supply JIG is necessary for the repair and check of Tuner or Cassette deck.

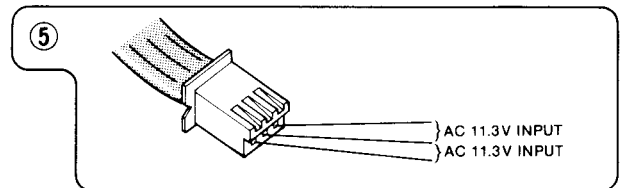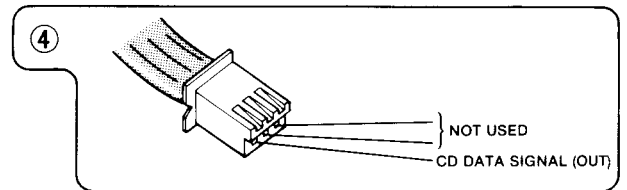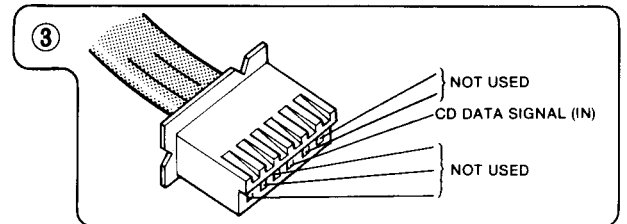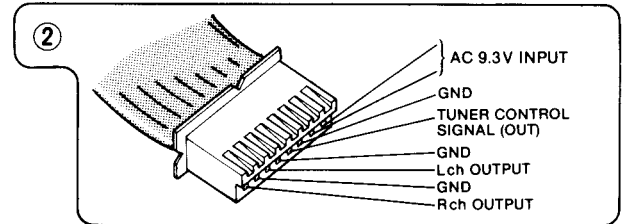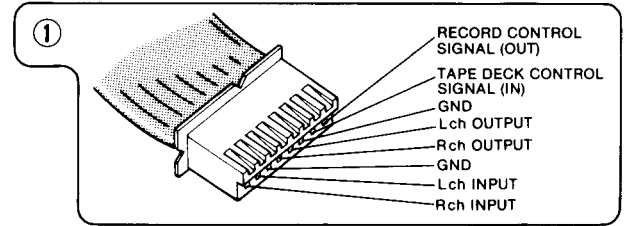

## PROTECTION CIRCUITRY

The protection circuitry may have operated if either of the following conditions is noticed:

- No sound is heard when the power is turned on.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of this unit are used.

If this occurs, follow the procedure outlines below:

1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again after one minute.

### Note

When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

## BEFORE REPAIR AND ADJUSTMENT

- (1) Turn off the power supply. Using a 10Ω, 5W resistor, shortcircuit both ends of power supply capacitors (C601, C602) in order to discharge the voltage.
- (2) Before turning the power supply on, after completion of repair, slowly apply the primary voltage by using a power supply voltage controller to make sure that the consumed current at 50Hz in NO SIGNAL mode should be shown below with respect to supply voltage 110V/127V/220V/240V.

Power supply voltage	AC110V	AC127V	AC220V	AC240V
Consumed current 50Hz	250 ~ 500mA	200 ~ 450mA	150 ~ 400mA	100 ~ 350mA

# DISASSEMBLY INSTRUCTIONS

**Ref. No. 1**      **How to remove the front panel**

**Procedure 1**

1. Remove the cabinet.
2. Remove the 3 screws (1 ~ 3).
3. Remove the 2 nuts (4, 5).
4. Remove the 6 nylon rivet (6 ~ 11).
5. Remove the 3 tabs.
6. Remove the front panel.

**Ref. No. 2**      **How to remove the sub P.C.B.**

**Procedure 1 → 2**

1. Remove the 1 screw (1).
2. Remove the power LED P.C.B.
3. Remove the 1 screw (2) and 2 tabs.
4. Remove the LED P.C.B.
5. Remove the 3 tabs.
6. Remove the lamp P.C.B., power switch P.C.B. and headphones P.C.B.

**Ref. No. 3**      **How to remove the main P.C.B.**

**Procedure 3**

1. Remove the 8 screws (1 ~ 8).

2. Remove the 3 screws (9 ~ 11).

**Ref. No. 4**      **How to remove the Power IC**

**Procedure 4**

1. Remove the 2 screws (1, 2) by spanner or plier.
2. Unsolder the power IC.

Hexagonal spanner

Power IC

• When mounting the power IC, apply silicon compound (SZZ0L15) to the rear of the power IC.

**Ref. No. 5**      **How to remove the remote control**

**Procedure 5**

1. Remove the Battery cover lid.
2. Remove the 2 screws (1, 2).
3. Insert a blade screwdriver between the upper and lower covers inside the battery compartment and them slowly loosen the bottom cover.

Battery cover lid

DOWN



## FUNCTION OF IC TERMINALS

### • IC202 (TC9177P) Attenuator

Pin No.	Mark	Description	Pin No.	Mark	Description
1	V <sub>SS</sub>	Power supply (negative).	10	CK	Clock input. Used to take in data at DATA pin.
2, 3 18, 19	CH1-Loudness 1,2 CH2-Loudness 1,2	Loudness terminal.	11	DATA	Attenuation/channel select data input. 20-bits input activated by CK signal.
4 17	CH1-OUT 1 CH2-OUT 1	10dB attenuator output. Signal via IN is attenuated, by 8 steps, 10dB each, from 0 ~ 70dB.	12	ST	Strobe input. Attenuation/channel select data from DATA and CK pins are lapped when this pin is at "H" level. Previous data remain the same while this pin does not reach "H" level.
5 16	CH1-IN 1 CH2-IN 1	10dB attenuator input.	20	V <sub>DD</sub>	Power supply (positive).
6 15	A-GND	AC grounding terminal.			
7 14	CH1-IN 2 CH2-IN 2	2dB attenuator input.			
8 13	CH1-OUT 2 CH2-OUT 2	2dB attenuator output. Signal via IN is attenuated by 5 steps, 2dB each, from 0 ~ 8dB.			
9	GND	Grounding terminal.			

### • IC251 (LC652)

Pin No.	Mark
1	LED
3	LED
4	LED
5	LED
28	LED
29	LED
30	LED
6	BAC
7	REM
8	AM
9	POWE
10	POWE
11	DE
12	ST/
13	DAT
14	CL
15	OS
16	OS
19	R
20	K
21	K
22	K
23	DA
24	D
25	D
26	D
27	LO

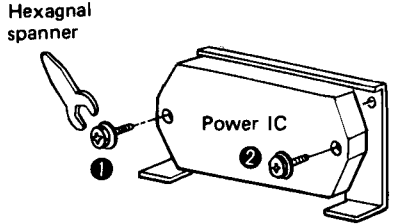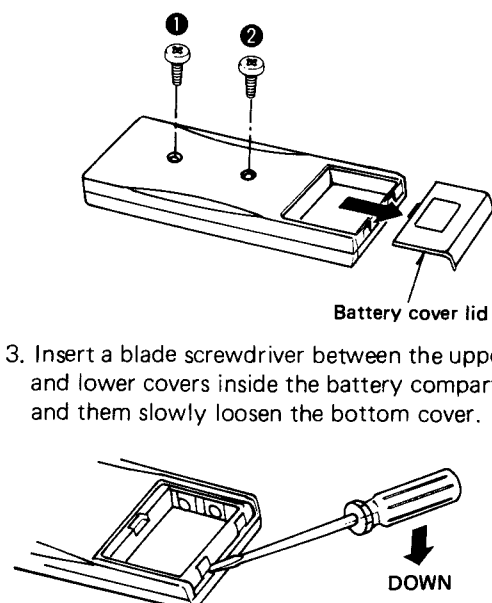
Ref. No. 4	How to remove the Power IC	Ref. No. 5	How to remove the remote control
Procedur	1. Remove the 2 screws (①, ②) by spanner or plier. 2. Unsolder the power IC.	Procedur 5	1. Remove the Battery cover lid. 2. Remove the 2 screws (①, ②)
	 <p>Hexagonal spanner</p> <p>Power IC</p> <p>① ②</p> <p>• When mounting the power IC, apply silicon compound (SZZ0L15) to the rear of the power IC.</p>	 <p>Battery cover lid</p> <p>3. Insert a blade screwdriver between the upper and lower covers inside the battery compartment and them slowly loosen the bottom cover.</p> <p>DOWN</p>	

## FUNCTION OF IC TERMINALS

### • IC202 (TC9177P) Attenuator

Pin No.	Mark	Description	Pin No.	Mark	Description
1	V <sub>SS</sub>	Power supply (negative).	10	CK	Clock input. Used to take in data at DATA pin.
2, 3 18, 19	CH1-Loudness 1, 2 CH2-Loudness 1, 2	Loudness terminal.	11	DATA	Attenuation/channel select data input. 20-bits input activated by CK signal.
4 17	CH1-OUT 1 CH2-OUT 1	10dB attenuator output. Signal via IN is attenuated by 8 steps, 10dB each, from 0 ~ 70dB.	12	ST	Strobe input. Attenuation/channel select data from DATA and CK pins are lapped when this pin is at "H" level. Previous data remain the same while this pin does not reach "H" level.
5 16	CH1-IN 1 CH2-IN 1	10dB attenuator input.	20	V <sub>DD</sub>	Power supply (positive).
6 15	A-GND	AC grounding terminal.			
7 14	CH1-IN 2 CH2-IN 2	2dB attenuator input.			
8 13	CH1-OUT 2 CH2-OUT 2	2dB attenuator output. Signal via IN is attenuated by 5 steps, 2dB each, from 0 ~ 8dB.			
9	GND	Grounding terminal.			


### • IC251 (LC6523C-3068) Microcomputer

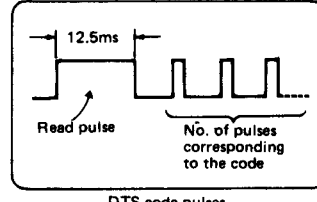Pin No.	Mark	Description																																																																								
①	LED 4	"L" level output is given to each pin according to the volume attenuation in order to light up the volume level LED. <table border="1" style="float: right; margin-top: 10px;"> <thead> <tr> <th>-dB</th> <th>LED Pin No.</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> <th>7</th> </tr> </thead> <tbody> <tr> <td>0 ~ -4dB</td> <td>②③</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>-6 ~ -10</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>-12 ~ -18</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>-20 ~ -26</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>-28 ~ -36</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>-38 ~ -52</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>-54 ~ ∞</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> </tbody> </table> <p>○ mark = Light up = "L" level output</p>	-dB	LED Pin No.	1	2	3	4	5	6	7	0 ~ -4dB	②③	○	○	○	○	○	○	○	-6 ~ -10	○	○	○	○	○	○	○	○	-12 ~ -18	○	○	○	○	○	○	○	○	-20 ~ -26	○	○	○	○	○	○	○	○	-28 ~ -36	○	○	○	○	○	○	○	○	-38 ~ -52	○	○	○	○	○	○	○	○	-54 ~ ∞	○	○	○	○	○	○	○	○
-dB	LED Pin No.		1	2	3	4	5	6	7																																																																	
0 ~ -4dB	②③		○	○	○	○	○	○	○																																																																	
-6 ~ -10	○		○	○	○	○	○	○	○																																																																	
-12 ~ -18	○		○	○	○	○	○	○	○																																																																	
-20 ~ -26	○		○	○	○	○	○	○	○																																																																	
-28 ~ -36	○		○	○	○	○	○	○	○																																																																	
-38 ~ -52	○		○	○	○	○	○	○	○																																																																	
-54 ~ ∞	○		○	○	○	○	○	○	○																																																																	
③	LED 5																																																																									
④	LED 6																																																																									
⑤	LED 7																																																																									
⑳	LED 1																																																																									
㉑	LED 2																																																																									
㉒	LED 3																																																																									
⑥	BACK-UP	<ul style="list-style-type: none"> <li>When this pin is at "L" level, the microcomputer is operated by the back-up circuit. (No. ⑩ pin alone receives an input, all the others not.)</li> <li>When this pin is at "H" level, No. ⑨ pin (POWER ON) gives an "L" level output if No. ⑫ pin (POWER SW) is at "H" level. No. ⑨ pin (POWER ON) is at "H" level, however, if the remote control's power on/off RAM data are off.</li> </ul>																																																																								
⑦	REMOTE	<ul style="list-style-type: none"> <li>Data codes reach here from the remote control receiver. (For data codes, refer to the remote control transmitter description.)</li> <li>The compact disc player's data codes are outputted from the light receiver direct to the player.</li> </ul>																																																																								
⑧	AMP	<ul style="list-style-type: none"> <li>When this pin receives an "H" level input, the amplifier turns on to start the operation.</li> <li>When this pin receives an "L" level input, the amplifier turns off to stop receiving the matrix key. Power on/off code alone is used to enable the remote control.</li> <li>Just when this pin's input comes from "H" to "L" level, the LED1 ~ LED7 and LOUD pins become "H".</li> </ul>																																																																								
⑨	POWER ON	<ul style="list-style-type: none"> <li>A rising level ("H" level) is detected at No. ⑩ pin to give an "L" level output to No. ⑨ pin (POWER ON).</li> <li>When No. ⑩ pin is at "L" level, No. ⑨ pin is given an "H" level output (POWER OFF).</li> </ul>																																																																								
⑩	POWER SW																																																																									
⑪	DECK	<ul style="list-style-type: none"> <li>When "Deck Play" code is fed from the remote control to No. ⑦ pin, the input selector is switched into TAPE 1 by a SELECTOR code output (No. ㉓ ~ No. ㉖ pins), causing an "H" level (when deck connection) output at No. ⑪ pin.</li> <li>When "Deck Stop" code is inputted, an "L" level output is given at No. ⑪ pin.</li> </ul>																																																																								
⑫	ST/DTS	<ul style="list-style-type: none"> <li>When "Tuner" code is fed from the remote control to No. ⑦ pin, The DTS code is outputted at pin No. ⑫ SELECTOR code is then outputted to make the input selector into TUNER mode.</li> <li>If the remote control's CH button has been kept depressed for longer than 1.5 seconds, 15 output pulses (AM code) are fed to the tuner and the number of pulses for a specified channel is given.</li> <li>If the button has been released within 1.5 seconds 13 output pulses (FM code) are fed to the tuner and the number of pulses for a specified channel is given.</li> </ul> <div style="float: right; margin-top: 10px;">  <p>DTS code pulses</p> <table border="1" style="float: right; margin-top: 10px;"> <thead> <tr> <th>Function</th> <th>No. of output pulses</th> </tr> </thead> <tbody> <tr> <td>CH 1 (CH 9)</td> <td>0</td> </tr> <tr> <td>CH 2 (CH 10)</td> <td>1</td> </tr> <tr> <td>CH 3 (CH 11)</td> <td>2</td> </tr> <tr> <td>CH 4 (CH 12)</td> <td>3</td> </tr> <tr> <td>CH 5 (CH 13)</td> <td>4</td> </tr> <tr> <td>CH 6 (CH 14)</td> <td>5</td> </tr> <tr> <td>CH 7 (CH 15)</td> <td>6</td> </tr> <tr> <td>CH 8 (CH 16)</td> <td>7</td> </tr> <tr> <td>FM</td> <td>13</td> </tr> <tr> <td>AM</td> <td>15</td> </tr> </tbody> </table> </div>	Function	No. of output pulses	CH 1 (CH 9)	0	CH 2 (CH 10)	1	CH 3 (CH 11)	2	CH 4 (CH 12)	3	CH 5 (CH 13)	4	CH 6 (CH 14)	5	CH 7 (CH 15)	6	CH 8 (CH 16)	7	FM	13	AM	15																																																		
Function	No. of output pulses																																																																									
CH 1 (CH 9)	0																																																																									
CH 2 (CH 10)	1																																																																									
CH 3 (CH 11)	2																																																																									
CH 4 (CH 12)	3																																																																									
CH 5 (CH 13)	4																																																																									
CH 6 (CH 14)	5																																																																									
CH 7 (CH 15)	6																																																																									
CH 8 (CH 16)	7																																																																									
FM	13																																																																									
AM	15																																																																									
⑬	DATA/S1	Together with No. ⑫ pin, Volume UP/DOWN, Balance L/R and Loudness signals are fed to the attenuator IC.																																																																								
⑭	CLK																																																																									
⑮	OSC 2																																																																									
⑯	OSC 1																																																																									
⑰	RES	Reset pulse input terminal. When a reset is made by the back-up circuit using electrolytic capacitors alone, 3 or 4 control RAM data are checked by the program. COLD START is activated when abnormal, HOT START when normal.																																																																								
⑳	K2	Input terminals for matrix keys.																																																																								
㉑	K1																																																																									
㉒	K0																																																																									
㉓	D <sub>A</sub> /S <sub>O</sub>	Input selector 4-bits BCD codes are outputted with Remote Control codes. * With Turntable "START" code, the output is given in the order of No. 1 → No. 2 → No. 6 → No. 1. <table border="1" style="float: right; margin-top: 10px;"> <thead> <tr> <th>No.</th> <th>Selector</th> <th>D<sub>A</sub></th> <th>D<sub>B</sub></th> <th>D<sub>C</sub></th> <th>D<sub>D</sub></th> </tr> </thead> <tbody> <tr> <td>1</td> <td>—</td> <td>L</td> <td>L</td> <td>L</td> <td>H</td> </tr> <tr> <td>2</td> <td>PHONO</td> <td>L</td> <td>L</td> <td>H</td> <td>L</td> </tr> <tr> <td>3</td> <td>TUNER</td> <td>L</td> <td>L</td> <td>H</td> <td>H</td> </tr> <tr> <td>4</td> <td>CD/AUX</td> <td>L</td> <td>H</td> <td>L</td> <td>L</td> </tr> <tr> <td>5</td> <td>TAPE 1</td> <td>L</td> <td>H</td> <td>H</td> <td>L</td> </tr> <tr> <td>6</td> <td>TURNTABLE START</td> <td>H</td> <td>L</td> <td>L</td> <td>L</td> </tr> <tr> <td>7</td> <td>TURNTABLE STOP</td> <td>H</td> <td>L</td> <td>L</td> <td>H</td> </tr> <tr> <td>8</td> <td>VCR/TAPE 2/EXT</td> <td>L</td> <td>H</td> <td>H</td> <td>H</td> </tr> <tr> <td>9</td> <td>VHD/AUX 2</td> <td>L</td> <td>H</td> <td>L</td> <td>H</td> </tr> </tbody> </table>	No.	Selector	D <sub>A</sub>	D <sub>B</sub>	D <sub>C</sub>	D <sub>D</sub>	1	—	L	L	L	H	2	PHONO	L	L	H	L	3	TUNER	L	L	H	H	4	CD/AUX	L	H	L	L	5	TAPE 1	L	H	H	L	6	TURNTABLE START	H	L	L	L	7	TURNTABLE STOP	H	L	L	H	8	VCR/TAPE 2/EXT	L	H	H	H	9	VHD/AUX 2	L	H	L	H												
No.	Selector		D <sub>A</sub>	D <sub>B</sub>	D <sub>C</sub>	D <sub>D</sub>																																																																				
1	—		L	L	L	H																																																																				
2	PHONO		L	L	H	L																																																																				
3	TUNER		L	L	H	H																																																																				
4	CD/AUX	L	H	L	L																																																																					
5	TAPE 1	L	H	H	L																																																																					
6	TURNTABLE START	H	L	L	L																																																																					
7	TURNTABLE STOP	H	L	L	H																																																																					
8	VCR/TAPE 2/EXT	L	H	H	H																																																																					
9	VHD/AUX 2	L	H	L	H																																																																					
㉔	D <sub>B</sub>																																																																									
㉕	D <sub>C</sub>																																																																									
㉖	D <sub>D</sub>																																																																									
㉗	LOUD	Loudness on/off signal output terminal. * By pressing the LOUDNESS key, an "L" level output is given at this pin to turn on the loudness switch. Push the key again, and an "H" level output will come to turn off the loudness switch.																																																																								

**Notes:**

**(A) Key matrix, scanning signal input/output pins and their functions ("H" level scan)**

OUT \ IN	K0 No.22	K1 No.21	K2 No.20
S0 No.23	Volume UP	Balance L	Loudness
S1 No.13	Volume DOWN	Balance R	

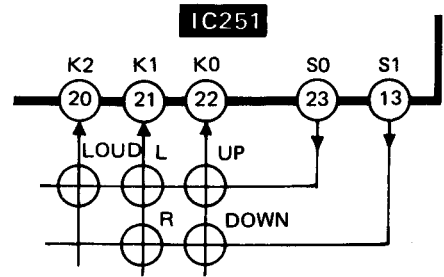

**(B) Volume UP/DOWN**

1. Push the key once, and the volume will turn up (or down) by 2dB each steps.
2. Keep the key depressed for more than 250msec, and the volume will turn up (or down) all the way automatically.
3. An "L" level output is given at LED1 ~ LED7 pins according to the volume attenuation.


**(C) Balance LEFT/RIGHT**

1. Push the key once, and the balance will shift to the left (or right) channel by 2dB. At the same time, the "Volume/Balance" indicator (LED1 ~ LED7) is switched to the Balance position. (The Balance indication goes on for about 4 ~ 6 seconds after the Balance key is released.)
2. Keep the key depressed for more than 500msec, the automatic shift mode will be invited.


**• IC252 (DN74LS145) BCD Decoder**

The microcomputer (IC251) codes are fed via its No. 23 ~ No. 26 pins to the IC252's No. 12 ~ No. 15 pins. An "L" level output is given according to the selector positions; now the input selector IC (IC201) receives the output as a switching signal. (For the input codes to IC252, refer to the list of codes under No. 23 ~ No. 26 pins of IC251.)

- \* Q256 is a transistor to keep Tape Deck 1 from switching from recording mode to playback mode, which might be otherwise caused by possible error data transfer from the remote control. (An "H" level input comes from the tape deck to the amplifier while in recording mode.)
- \* No.9 pin is not used in this model.

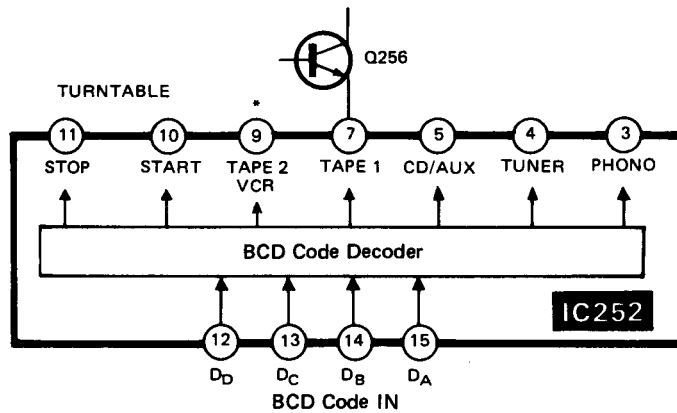


**• IC201 (LC7818) Input Selector**

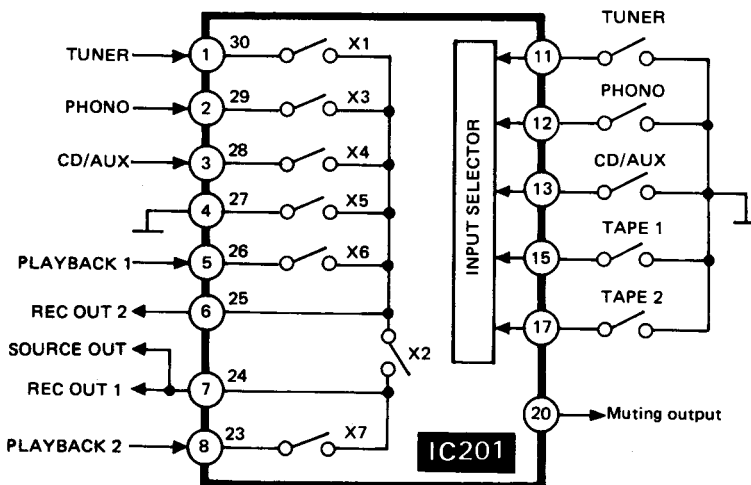


MODE \ SW	X1	X2	X3	X4	X5	X6	X7
PHONO		on	on				
TUNER	on	on					
CD/AUX		on		on			
TAPE 1		on				on	
TAPE 2		on					on




# CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM

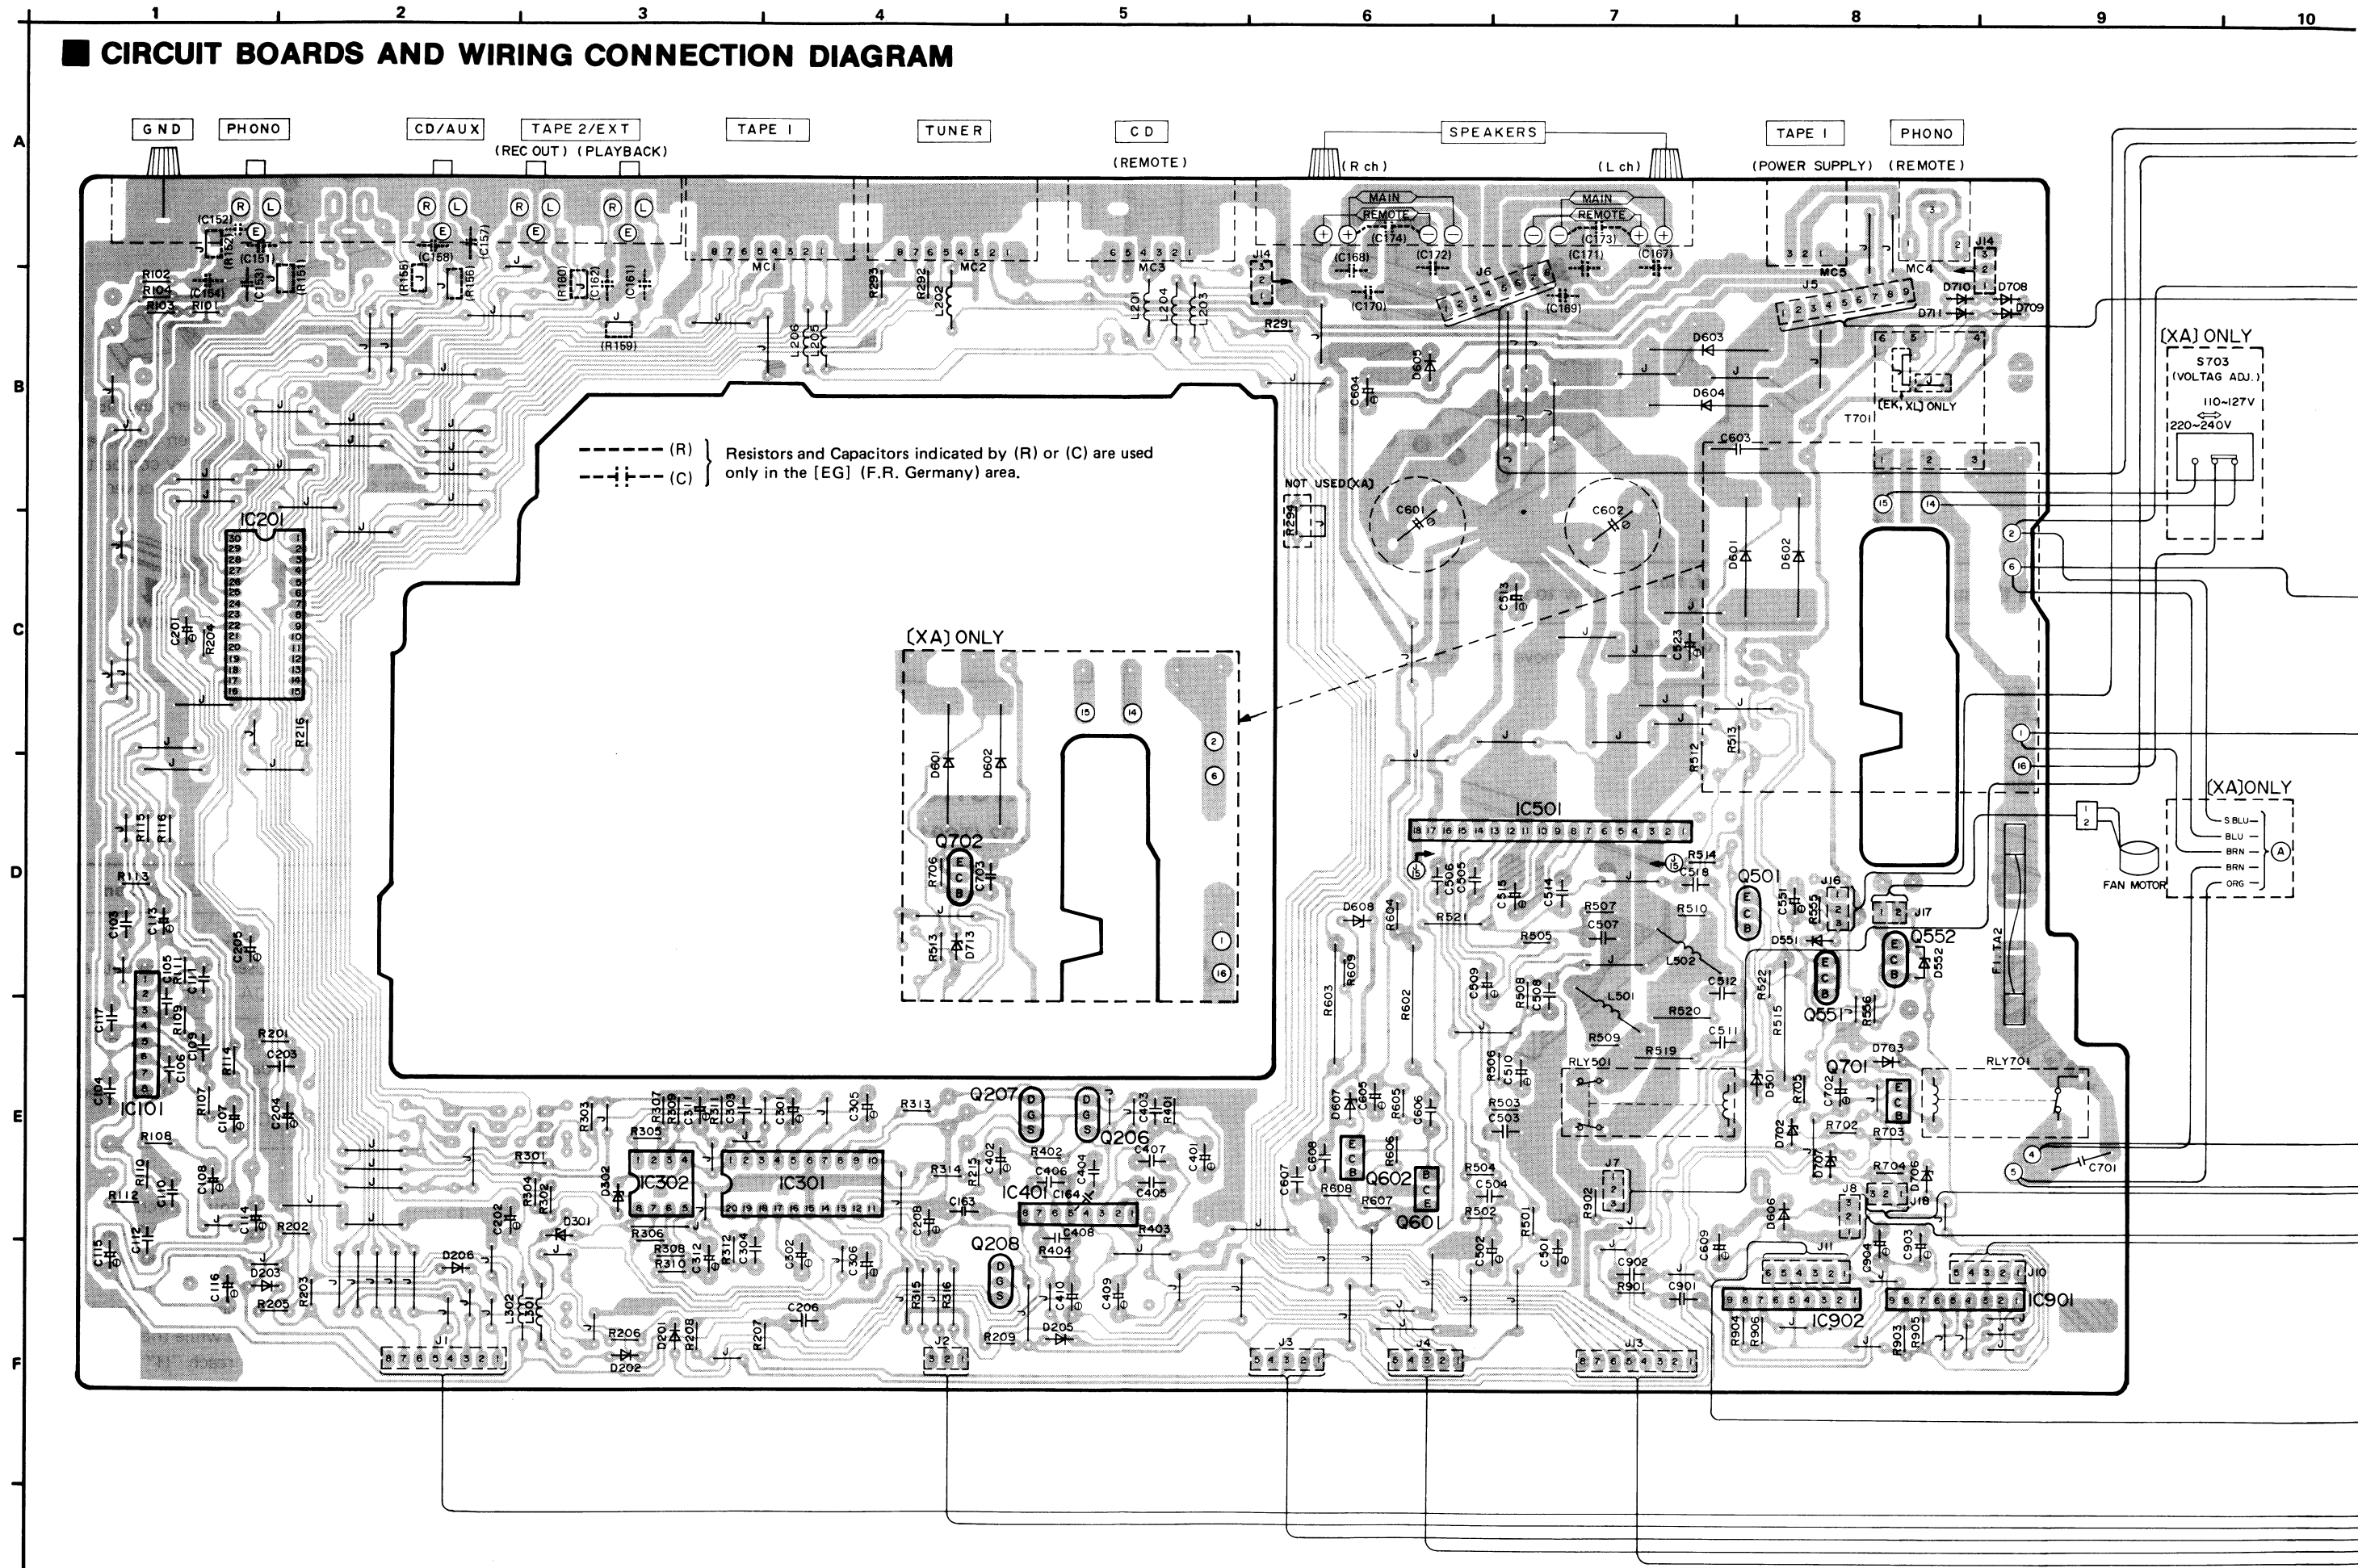



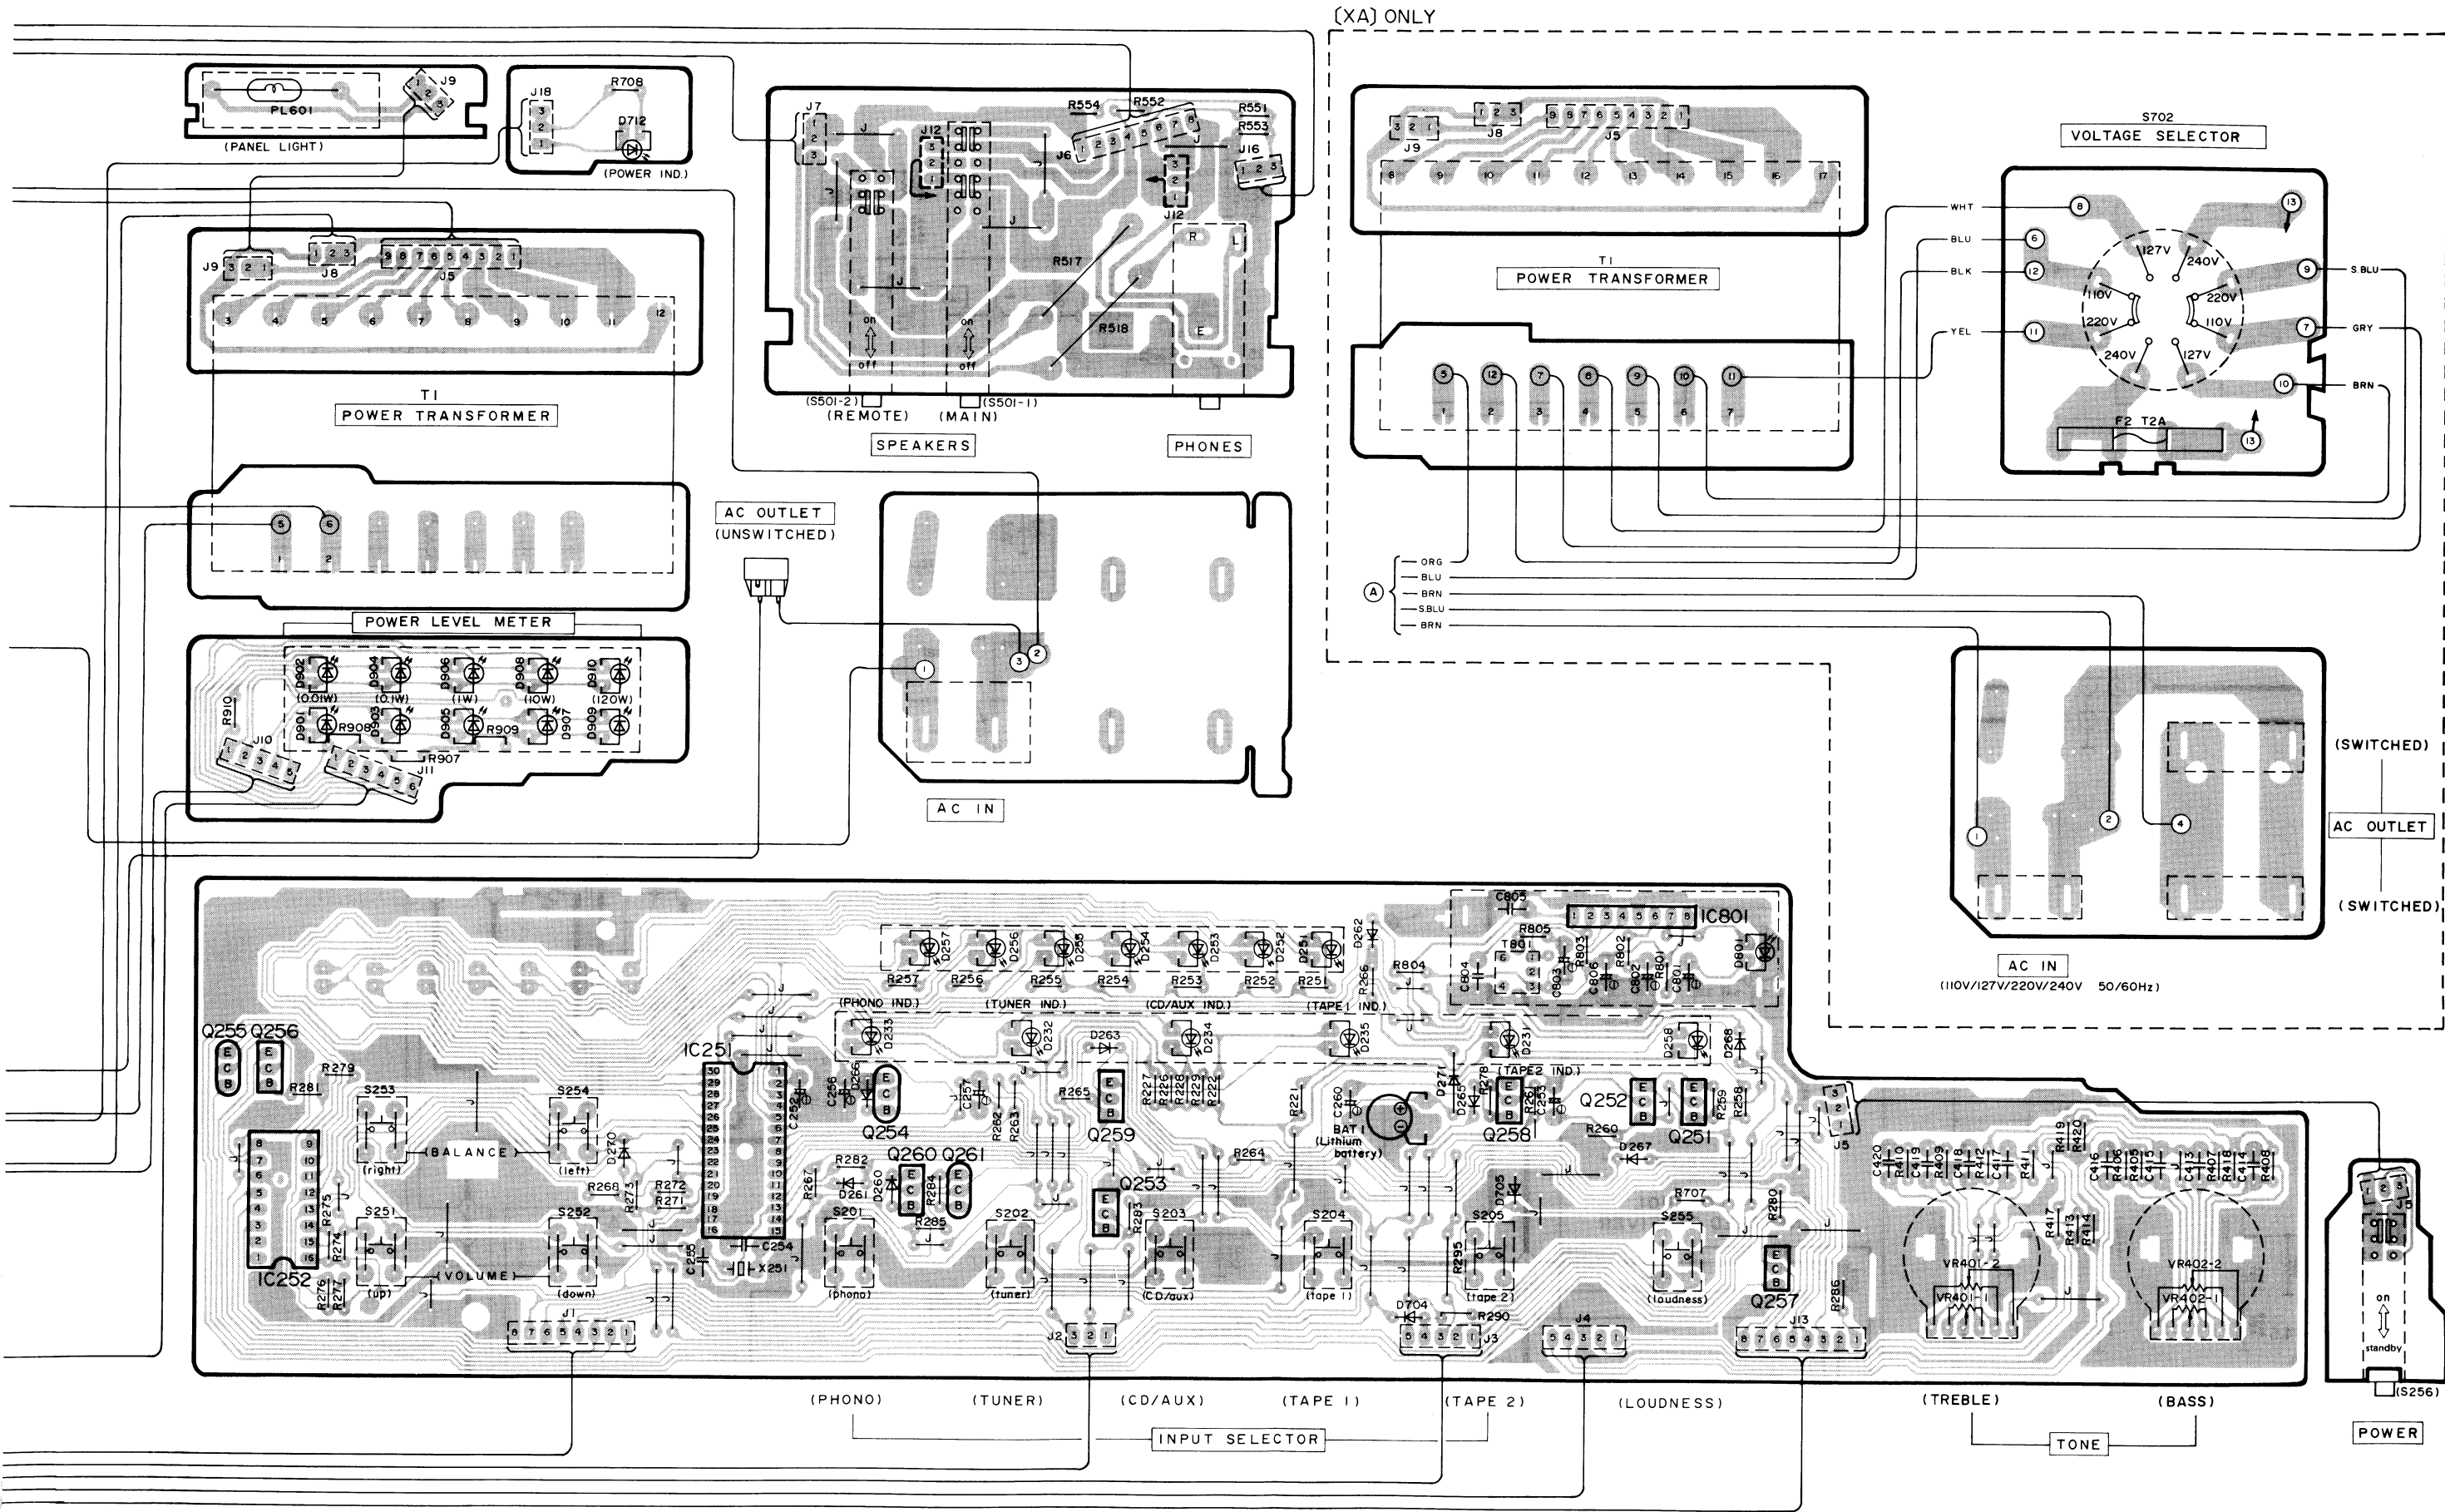


● Remote Control Unit (Transmitter)

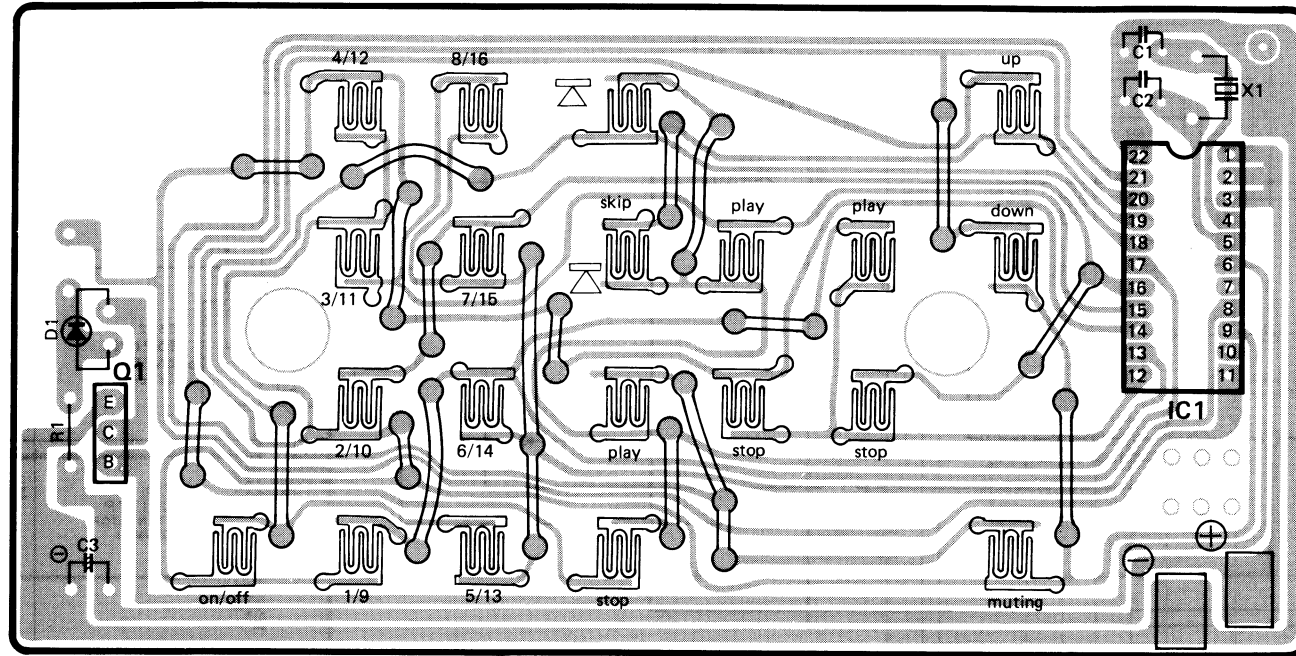


● Terminal guide of transistors, diodes and IC's

<table border="1"> <tr><td>LC7818</td><td>30pin</td></tr> <tr><td>LC6523C</td><td>30pin</td></tr> <tr><td>MN6013D</td><td>22pin</td></tr> <tr><td>TC9177P</td><td>20pin</td></tr> <tr><td>DN74LS145</td><td>16pin</td></tr> <tr><td>M5218P</td><td>8pin</td></tr> </table>	LC7818	30pin	LC6523C	30pin	MN6013D	22pin	TC9177P	20pin	DN74LS145	16pin	M5218P	8pin	<table border="1"> <tr><td>M5220L</td><td>8pin</td></tr> <tr><td>M5218L</td><td>8pin</td></tr> <tr><td>LA7224</td><td>8pin</td></tr> </table>	M5220L	8pin	M5218L	8pin	LA7224	8pin	<table border="1"> <tr><td>SVIBA6144</td><td>9pin</td></tr> </table>	SVIBA6144	9pin	<table border="1"> <tr><td>MA4051, MA4056</td><td></td></tr> <tr><td>MA4082, MA4140</td><td></td></tr> </table>	MA4051, MA4056		MA4082, MA4140	
LC7818	30pin																										
LC6523C	30pin																										
MN6013D	22pin																										
TC9177P	20pin																										
DN74LS145	16pin																										
M5218P	8pin																										
M5220L	8pin																										
M5218L	8pin																										
LA7224	8pin																										
SVIBA6144	9pin																										
MA4051, MA4056																											
MA4082, MA4140																											
<table border="1"> <tr><td>SVI3105</td><td></td></tr> </table>	SVI3105		<table border="1"> <tr><td>DTC144</td><td></td></tr> <tr><td>DTC124</td><td></td></tr> </table>	DTC144		DTC124		<table border="1"> <tr><td>DTA114</td><td></td></tr> </table>	DTA114		<table border="1"> <tr><td>MA165, MA167</td><td></td></tr> <tr><td>SVDS3V20</td><td></td></tr> <tr><td>1SR35200</td><td></td></tr> </table>	MA165, MA167		SVDS3V20		1SR35200		<table border="1"> <tr><td>LN061330P, LN108327P</td><td></td></tr> <tr><td>LN074328P, PN323B</td><td></td></tr> <tr><td>SE303AY</td><td></td></tr> </table>	LN061330P, LN108327P		LN074328P, PN323B		SE303AY				
SVI3105																											
DTC144																											
DTC124																											
DTA114																											
MA165, MA167																											
SVDS3V20																											
1SR35200																											
LN061330P, LN108327P																											
LN074328P, PN323B																											
SE303AY																											
<table border="1"> <tr><td>2SD1265</td><td></td></tr> </table>	2SD1265		<table border="1"> <tr><td>2SK301</td><td></td></tr> </table>	2SK301		<table border="1"> <tr><td>2SA992</td><td></td></tr> </table>	2SA992		<table border="1"> <tr><td>2SA1309</td><td></td></tr> <tr><td>2SC3311</td><td></td></tr> <tr><td>UN1231</td><td></td></tr> </table>	2SA1309		2SC3311		UN1231													
2SD1265																											
2SK301																											
2SA992																											
2SA1309																											
2SC3311																											
UN1231																											


■ SCHEMATIC DIAGRAM OF REMOTE CONTROL TRANSMITTER

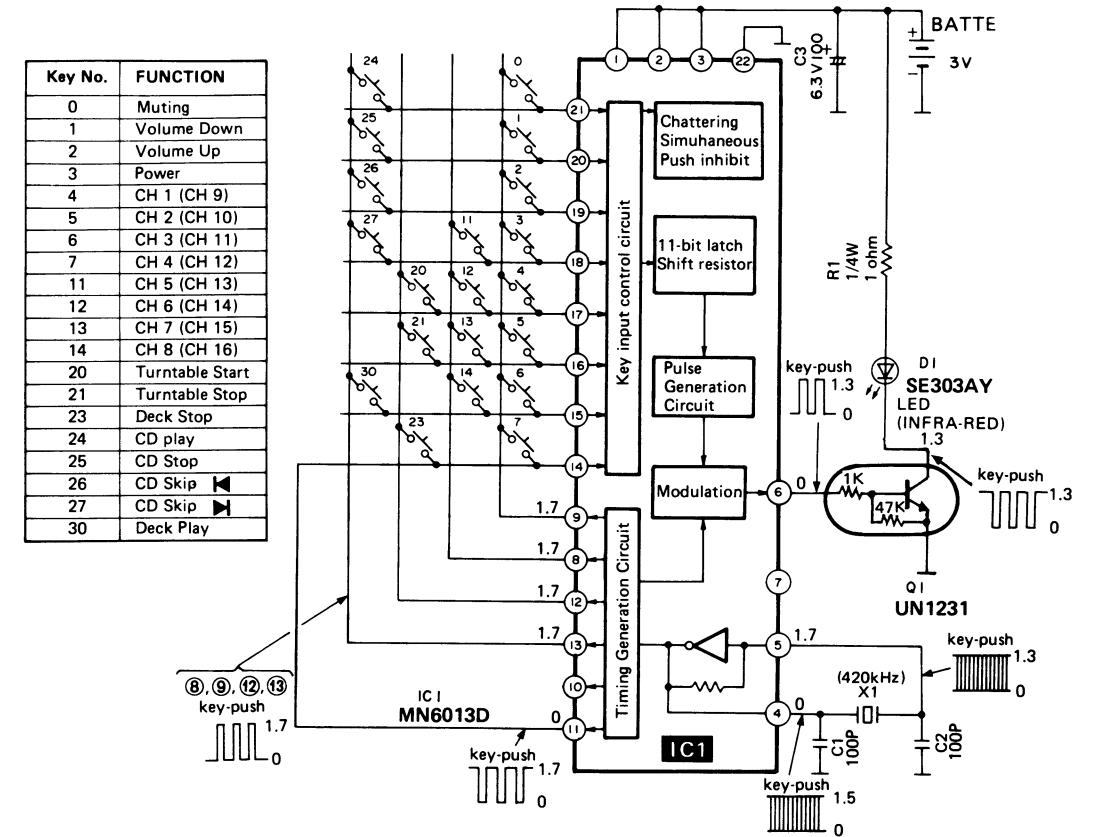


■ KEY NUMBER DESCRIPTION AND DATA CODE OF REMOTE CONTROL TRANSMITTER (Example. key No. 1)

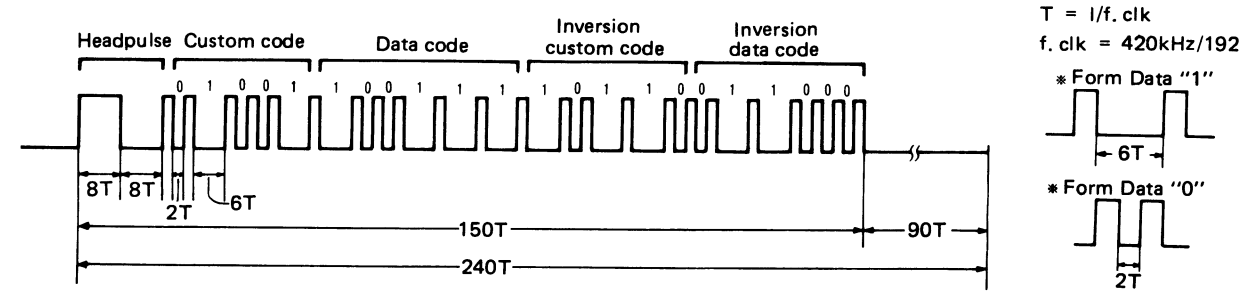

Key No.	Command	Custom code	Data code	Key No.	Command	Custom code	Data code
0	Audio muting	01001	100111	13	Tuning 7	01001	010110
1	Volume down	01001	100101	14	Tuning 8	01001	010111
2	Volume up	01001	100100	20	Turntable start	01001	001100
3	ON/OFF (Power)	01001	100000	21	Turntable stop	01001	001101
4	Tuning 1	01001	010000	23	Deck stop	01001	000000
5	Tuning 2	01001	010001	24	CD play	01100	001010
6	Tuning 3	01001	010010	25	CD stop	01100	000000
7	Tuning 4	01001	010011	26	CD skip ◀	01100	000010
11	Tuning 5	01001	010100	27	CD skip ▶	01100	000011
12	Tuning 6	01001	010101	30	Deck play ▶	01001	001010

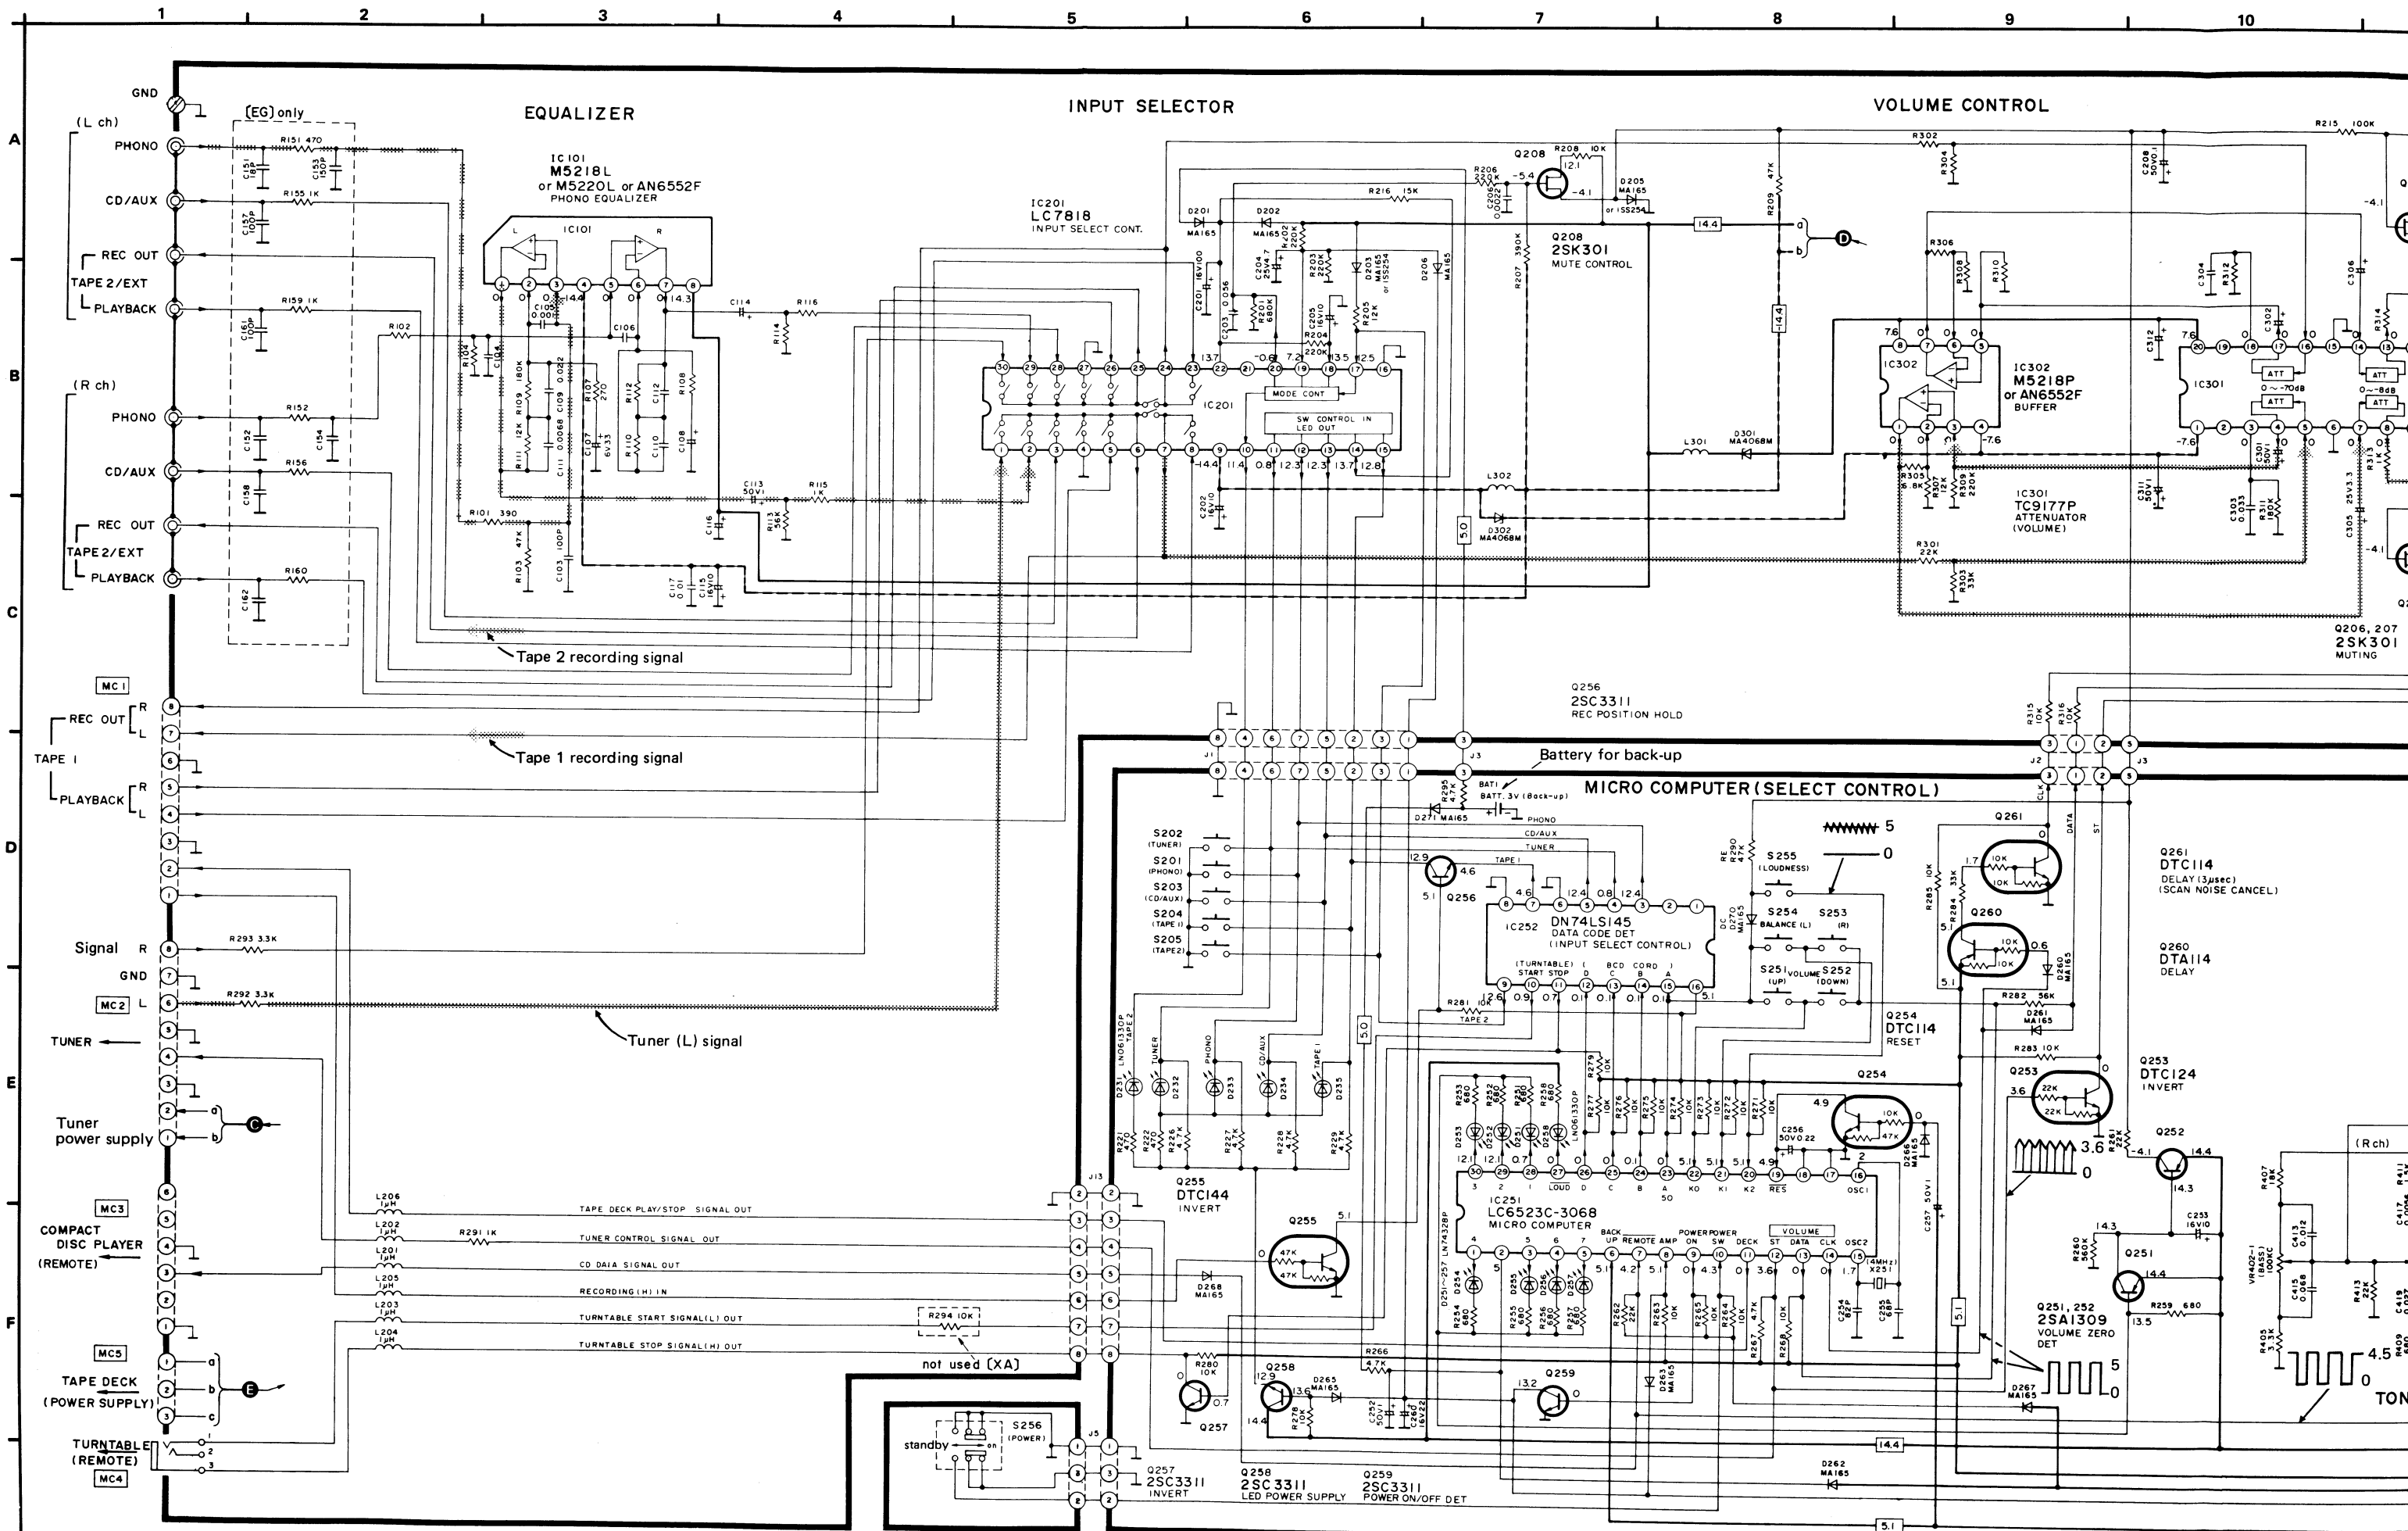

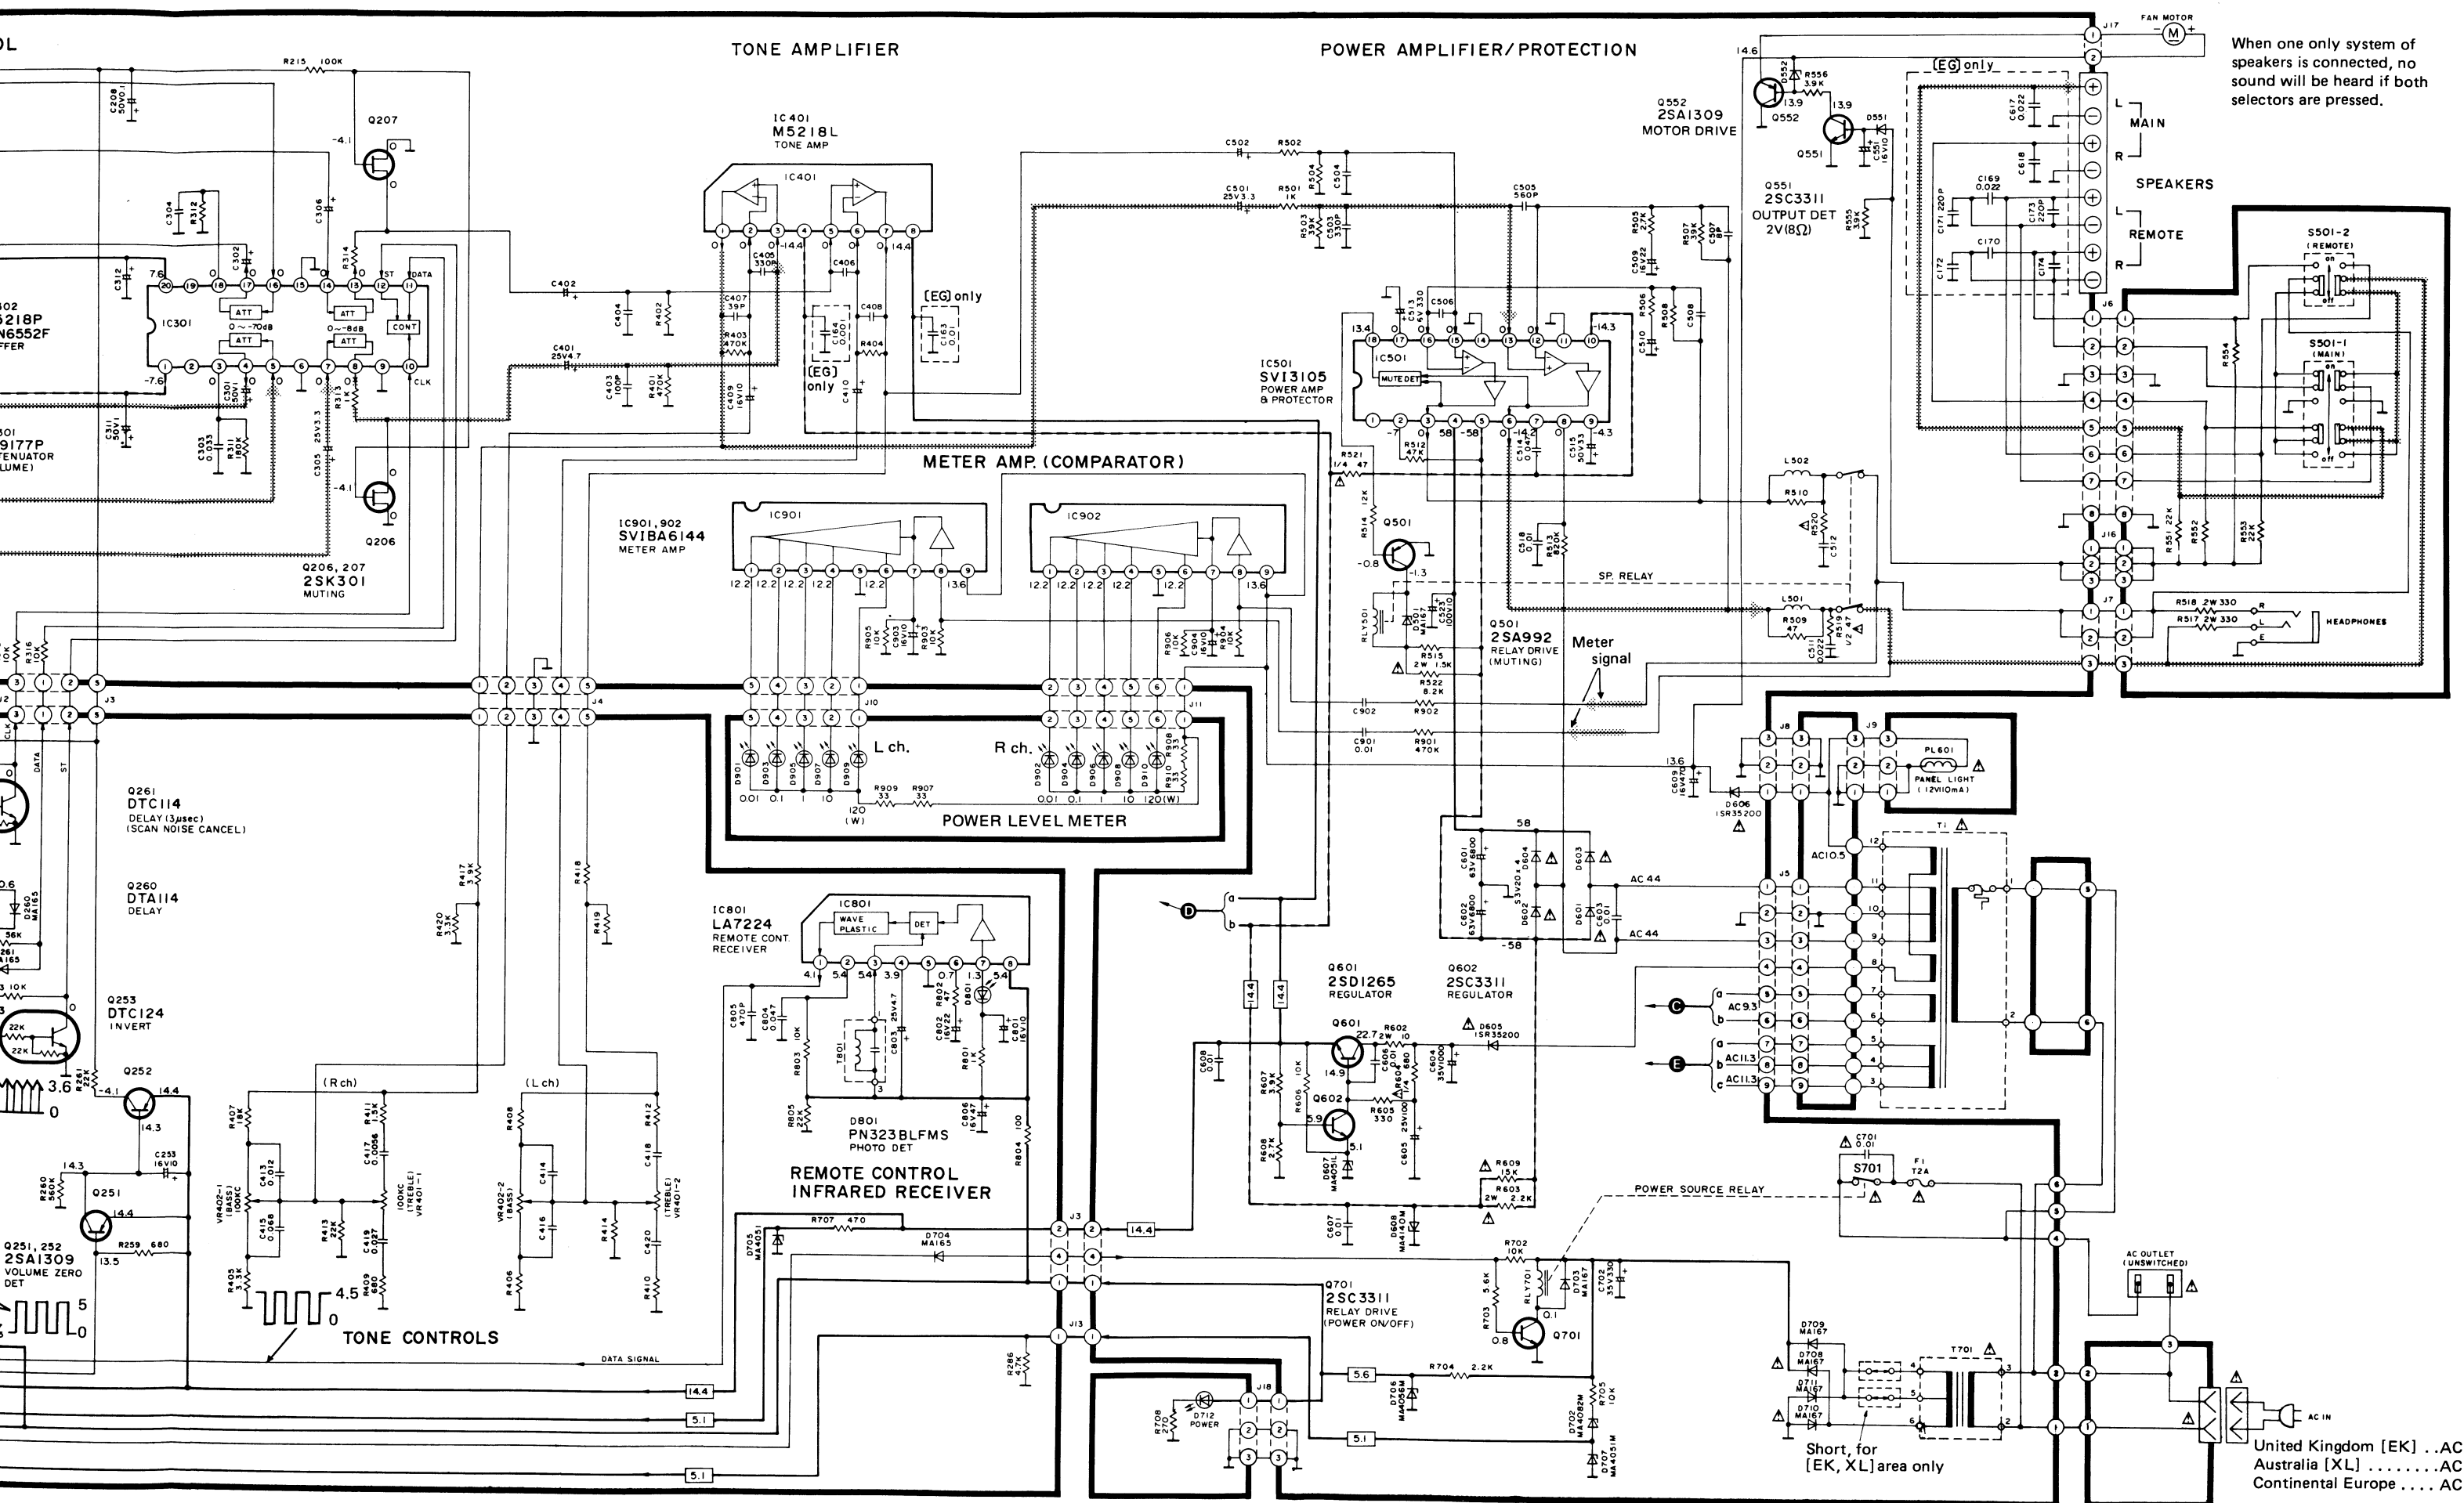


When one only system of speakers is connected, no sound will be heard if both selectors are pressed.

United Kingdom [EK] ... AC 2  
 Australia [XL] ... AC 2  
 Continental Europe ... AC 2



● Power source circuit for other areas [XA]

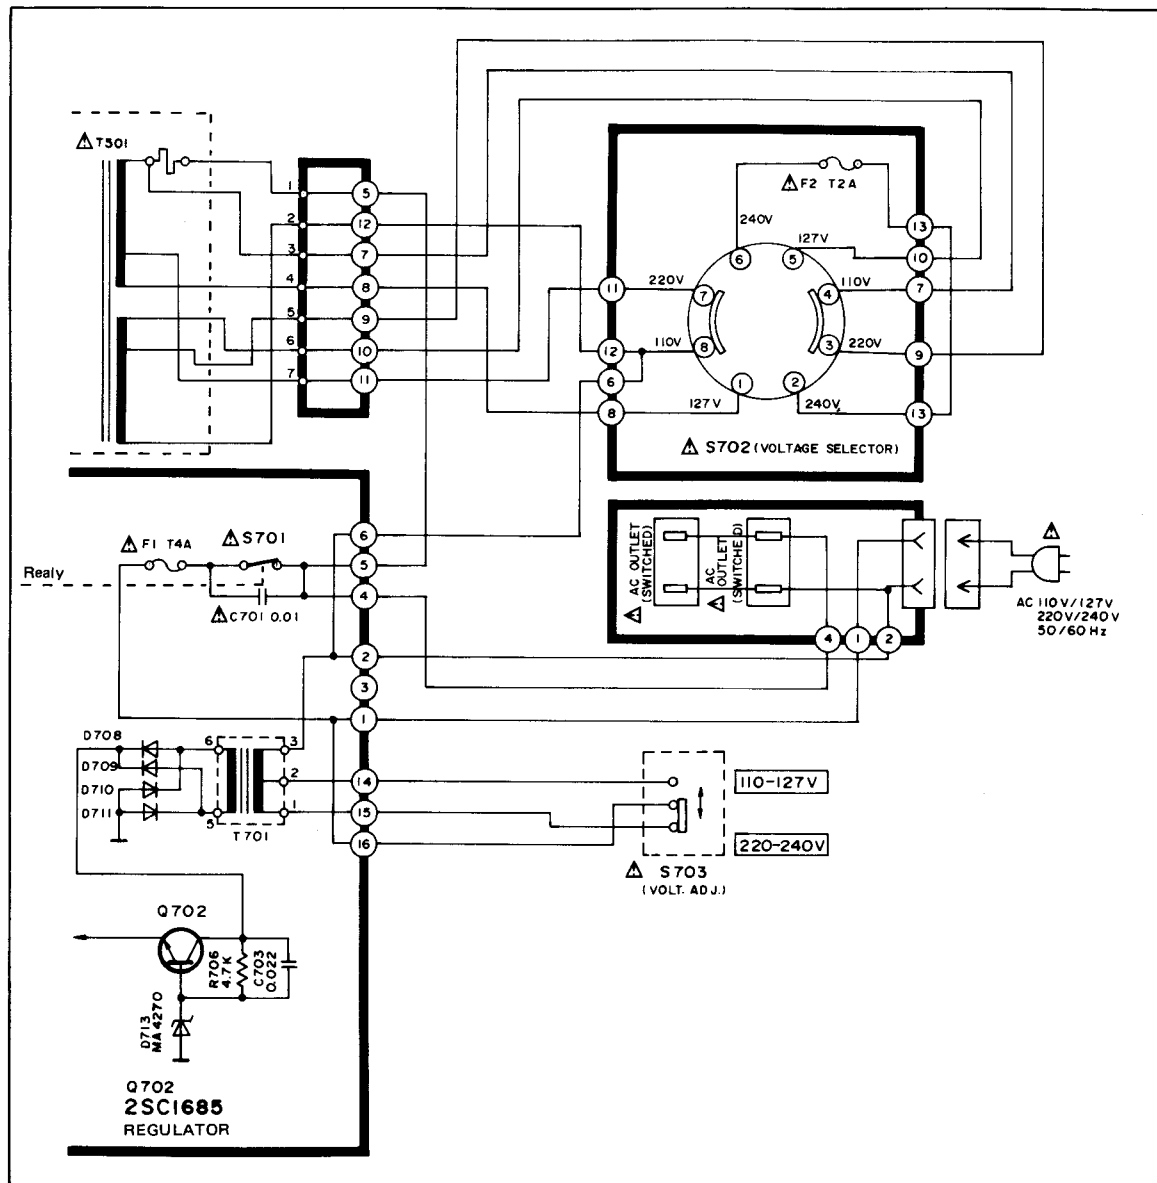

● Before use

**WARNING:** To avoid any serious damages, strongly be sure the voltage setting of the both voltage adjust switches according to the area.


Be sure to disconnect the mains cord before adjusting both voltage adjust switches.

Use a minus (-) screwdriver to set the voltage adjust switches.

1. This amplifier is already set to the "220 V ~ 240 V" position before shipment.

If the power supply in your areas is 110 V ~ 127 V,

Set to the "110 V ~ 127 V" position.



2. Set to the voltage setting for the area in which the unit will be used.

(If the power supply in your area is 117 V or 120 V, set to the "127 V" position.)

**Note:**

There are no voltage adjust switches for some countries; the correct voltage is already set.

— Measure against abnormality of memory function —

- Pull out the AC cord and check that the voltage at VDD terminal (pin No. 2) of IC251 (microcomputer) is +2V or over.
  - If the voltage is less than +2V, check that the battery voltage is +2V or over.
  - If the battery voltage is lower than +2V, replace the battery with new one.
- \* ● Make sure that the battery voltage is +2V or over before setting the battery.  
● Do not short-circuit between the plus and minus sides. Also, set the battery in correct position.

— CAUTION —

This lithium battery is critical component (Type No. BR2325-1VC, Mfr by Matsushita). Please observe proper polarity and exact location when replacement and soldering in the replacement lithium battery.

■ SCHEMATIC DIAGRAM

(This schematic diagram may be modified at any time with the development of new technology.)



Notes :

- S201 : Input selector, "phono" switch
  - S202 : Input selector, "Tuner" switch
  - S203 : Input selector, "CD/Aux" switch
  - S204 : Input selector, "Tape 1" switch
  - S205 : Input selector, "Tape 2/Ext" switch
  - S251 : Volume, "Up" switch
  - S252 : Volume, "Down" switch
  - S253 : Balance, "Left" switch
  - S254 : Balance, "Right" switch
  - S255 : Loudness switch
  - S256 : Power switch in "on" position. (■ standby, ▲ on)
  - S501 : Main speakers switch in "on" position.
  - S502 : Remote speakers switch in "on" position.
  - S701 : Main power supply switch (with relay) in "on" position.
  - S702 (For [XA] area only) : Voltage adjust switch in "220V" position. (127V ↔ 110V ↔ 220V ↔ 240V)
  - S703 (For [XA] area only) : Voltage adjust switch in "220-240V" position. (110 - 127V ↔ 220 - 240V)
17. Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.  
Measurement condition :  
Input Selector → Tuner (no signal)  
Volume Ind. → Level "1" light-up  
Loudness → off
- Signal lines (L channel) [Symbol]
  - Positive (+B) voltage lines [Symbol]
  - Negative (-B) voltage lines [Symbol]
20. Important safety notice:  
Components identified by ▲ mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.


\* Caution !

- IC and LSI are sensitive to static electricity. Secondary trouble can be prevented by taking care during repair.
- \* Cover the parts boxes made of plastics with aluminum foil.
- \* Ground the soldering iron.
- \* Put a conductive mat on the work table.
- \* Do not touch the legs of IC or LSI with the fingers directly.


● DECK/TUNER/CD player Connection Terminal of Rear panel

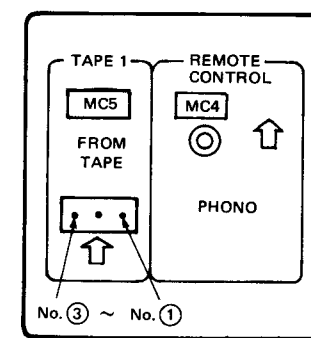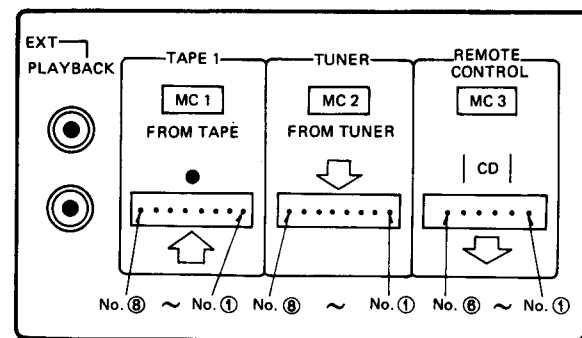

■ BLOCK DIAGRAM

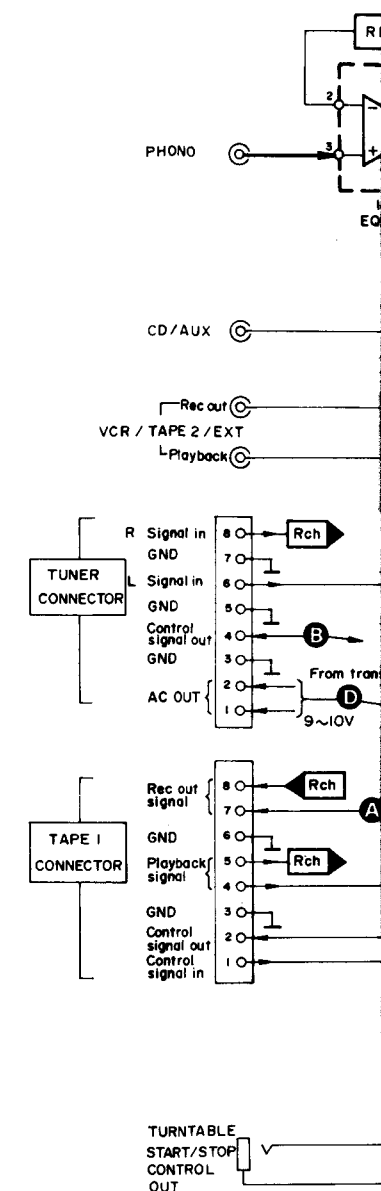

# BLOCK DIAGRAM

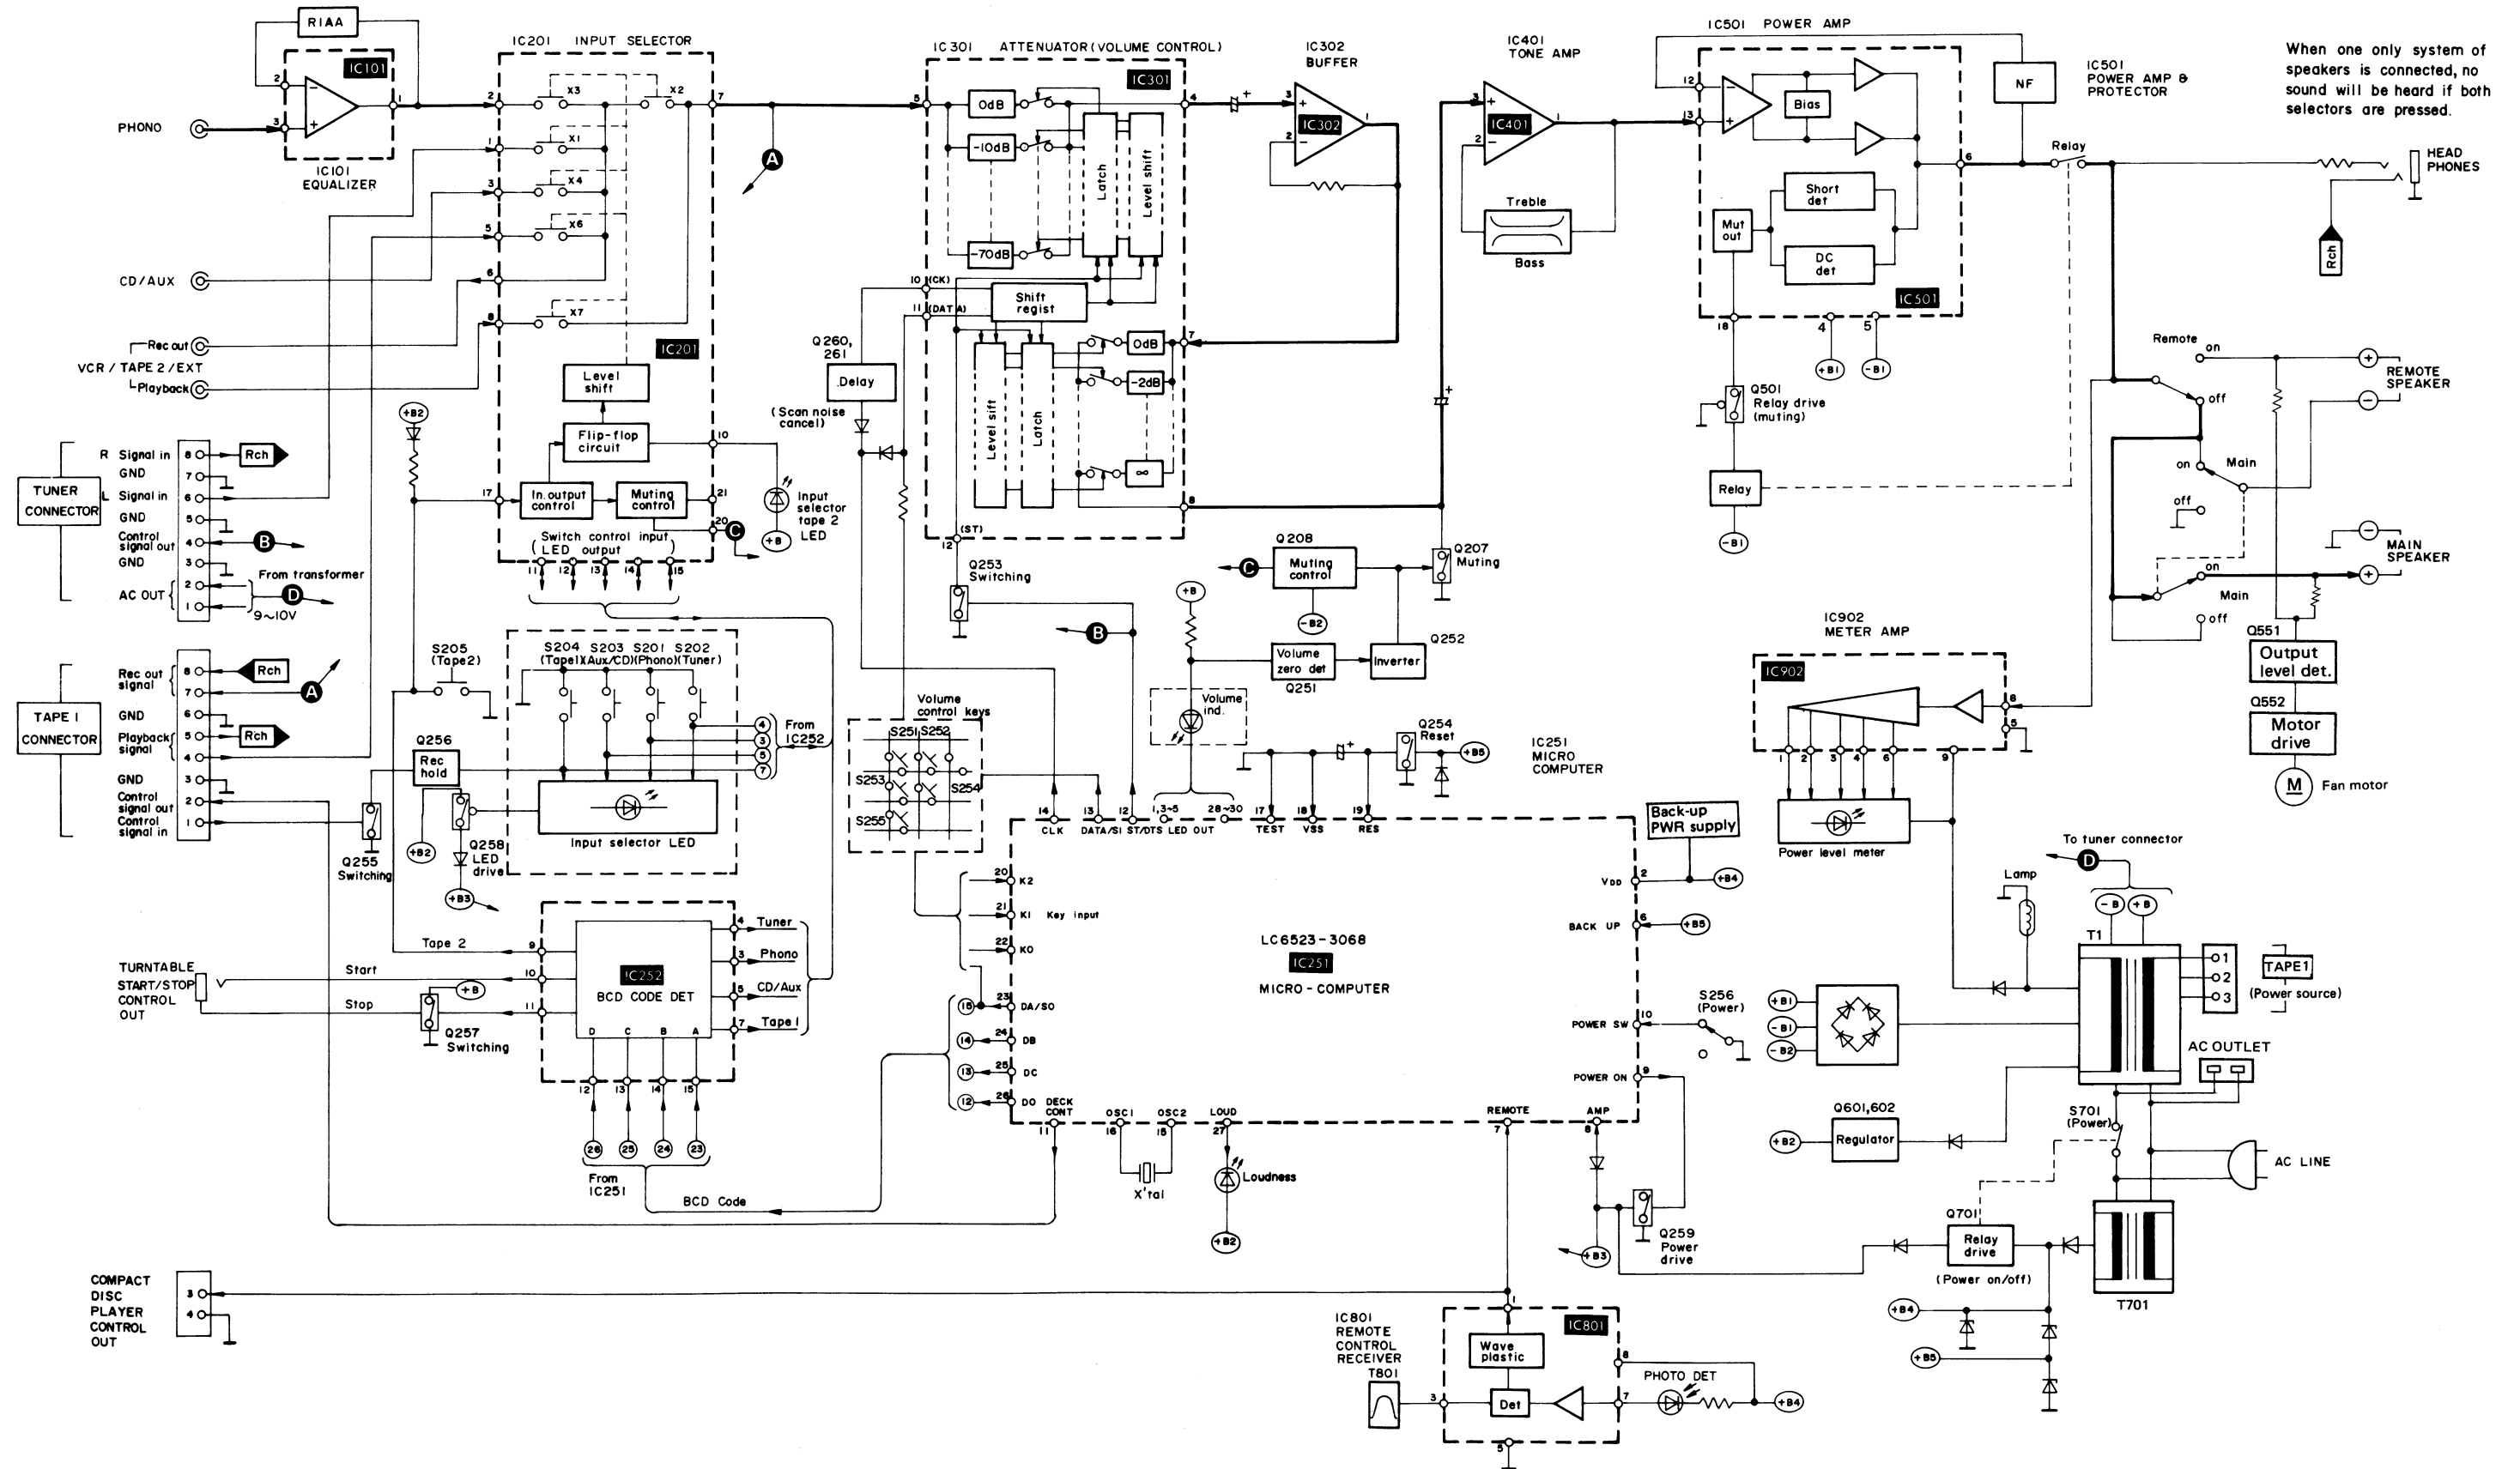

# REPLACEMENT PARTS LIST

- Notes:
- 1. Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
  - 2. Important safety notice:  
Components identified by  $\Delta$  mark have special characteristics important for safety. When replacing any of these components use only manufacturer's specified parts.
  - 3. Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.
  - 4. The parenthesized numbers in the column of description stand for the quantity per set.
  - 5. The unit of resistance is OHM ( $\Omega$ ).  
K = 1000 $\Omega$ , M = 1000K $\Omega$
  - 6. The unit of capacitance is MICROFARAD ( $\mu$ F).  
P =  $10^{-6}$   $\mu$ F

### Numbering System of Resistor

Example

ERD	25	F	J	101
Type	Wattage	Shape	Tolerance	Value

Resistor Type	Wattage	Tolerance
ERD : Carbon	12 : 1/2W	J : $\pm 5\%$
ERG : Metal Oxide	2A : 2W	K : $\pm 10\%$
ERC : Solid	S2 : 1/4W	
	25 : 1/4W	
	S1 : 1/2W	


### Numbering System of Capacitor

Example

ECKD	1H	102	Z	F
Type	Voltage	Value	Tolerance	Peculiarity

Capacitor Type	Voltage	Tolerance
ECE : Electrolytic	0J : 6.3V 66V : 66V	K : $\pm 10\%$
ECC : Ceramic	1V : 35V 1J : 63V	Z : +80%, -20%
ECK : Ceramic	1C : 16V KC : 400V AC	M : $\pm 20\%$
ECF : Semi-conductor	1E : 25V 2A : 100V	P : +100%, -0%
ECQ : Polyester	D : 25V 2H : 500V	

# EXPLODED VIEW

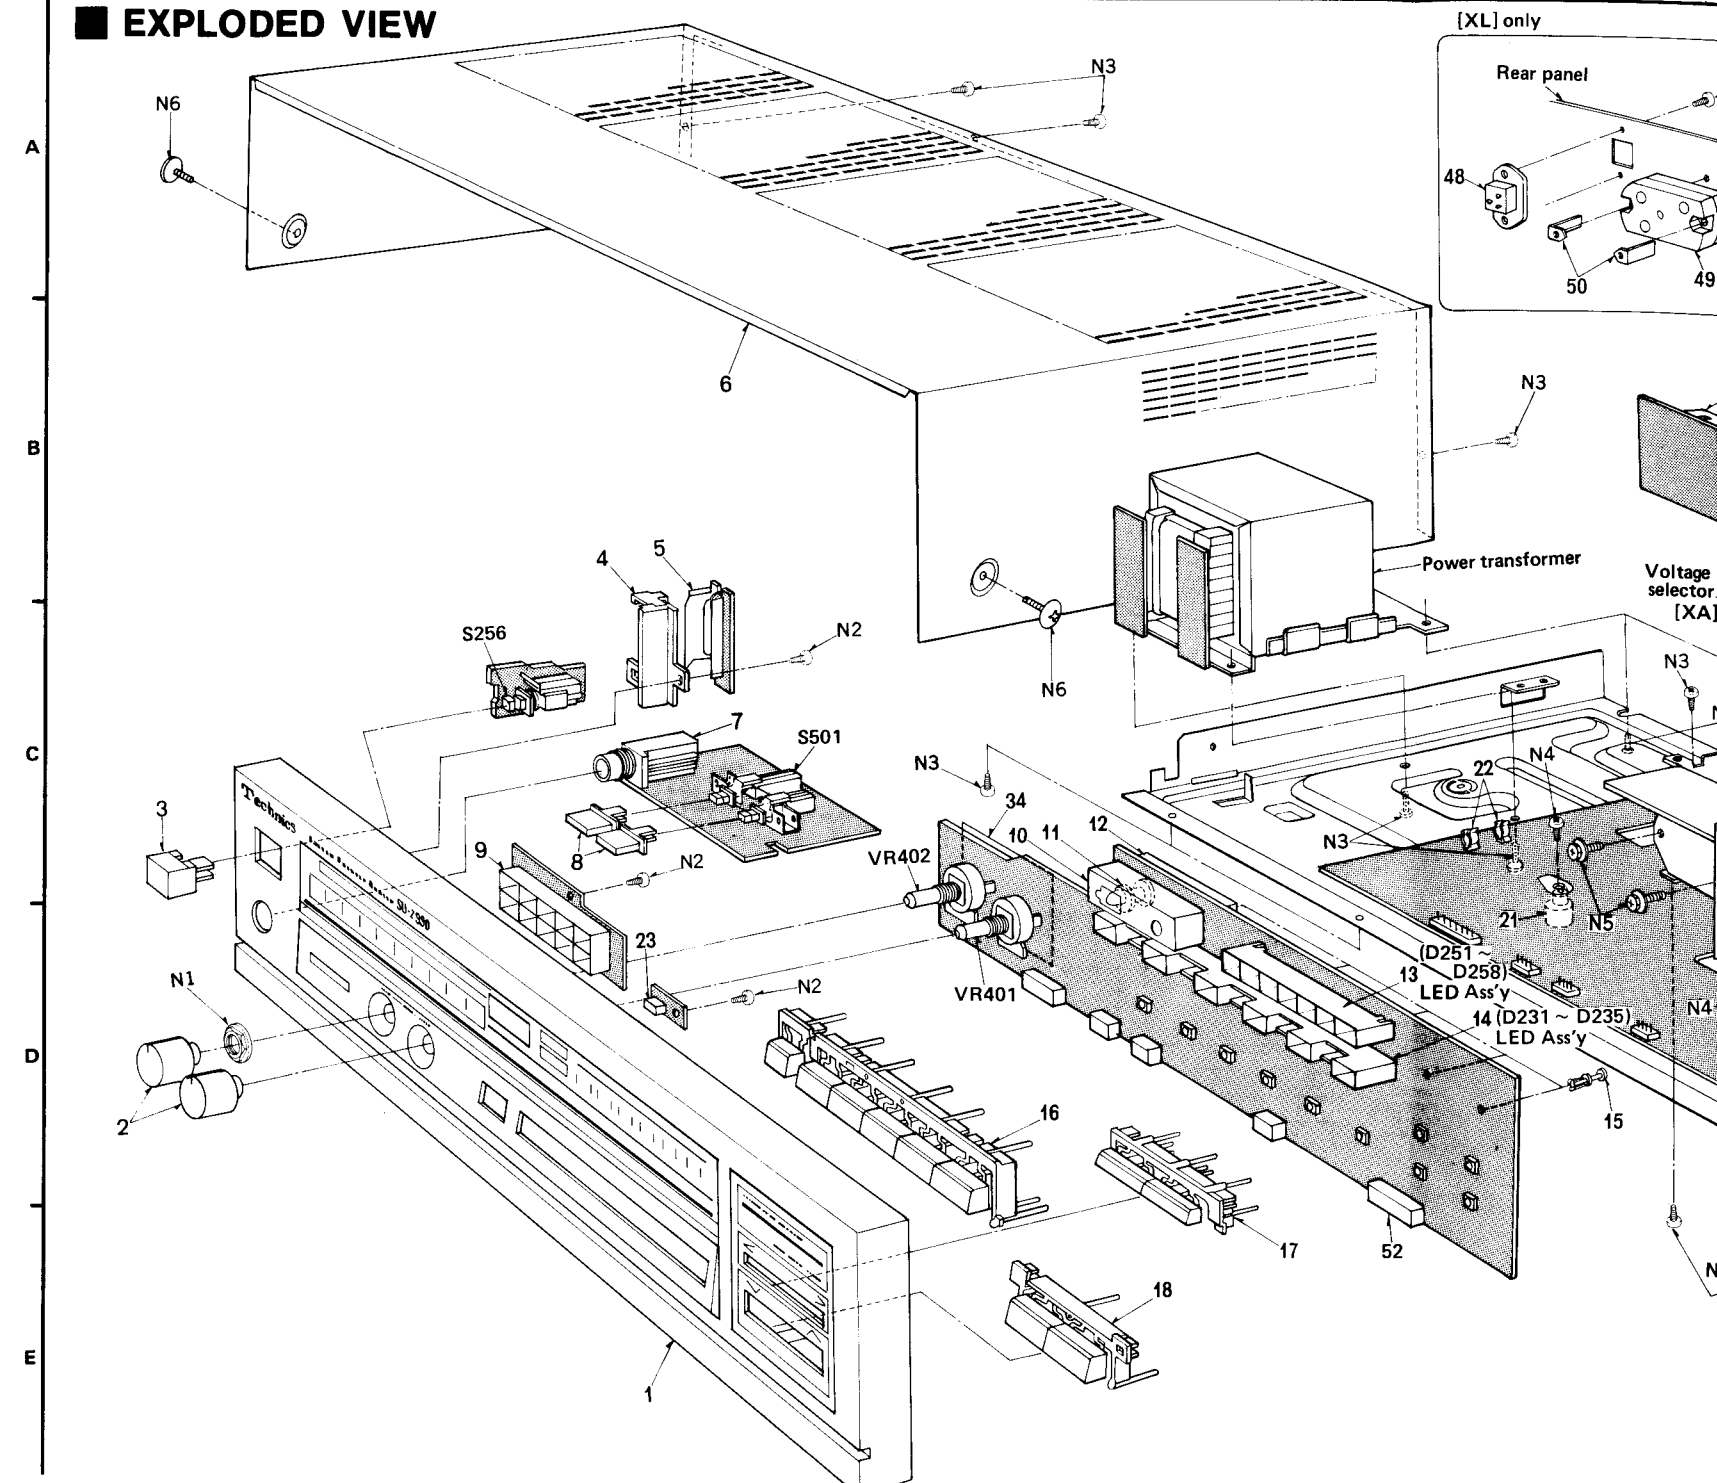

## RESISTORS


Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value
R1	ERDS2TJ1R0	1	R260	ERDS2TJ564	560K	R313, 314	ERDS2TJ102	1K	R605	ERDS2TJ331	330
R101, 102	ERDS2TJ391	390	R261	ERDS2TJ223	22K	R315, 316	ERD25TJ103	10K	R606	ERDS2TJ103	10K
R103, 104	ERDS2TJ473	47K	R262, 263	ERDS2TJ103	10K	R401, 402	ERDS2TJ474	470K	R607	ERDS2TJ392	3.9K
R107, 108	ERDS2TJ271	270	R264, 265	ERDS2TJ103	10K	R403, 404	ERDS2TJ474	470K	R608	ERDS2TJ272	2.7K
R109, 110	ERDS2TJ184	180K	R266, 267	ERDS2TJ472	4.7K	R405, 406	ERDS2TJ332	3.3K	R609	ERDS2TJ153	15K
R111, 112	ERDS2TJ123	12K	R268	ERDS2TJ103	10K	R407, 408	ERDS2TJ183	18K	R702	ERDS2TJ103	10K
R113, 114	ERDS2TJ563	56K	R271, 272	ERDS2TJ103	10K	R409, 410	ERDS2TJ681	680	R704	ERDS1FJ102	1K
R115, 116	ERDS2TJ102	1K	R273, 274	ERDS2TJ103	10K	R411, 412	ERDS2TJ152	1.5K	R705	ERDS2TJ103	10K
R151, 152[EG]	ERDS2TJ471	470	R275, 276	ERDS2TJ103	10K	R413, 414	ERDS2TJ223	22K	R706 [XA]	ERDS2TJ472	4.7K
R155, 156[EG]	ERDS2TJ102	1K	R277, 278	ERDS2TJ103	10K	R417, 418	ERDS2TJ392	3.9K	R707	ERDS2TJ471	4.70
R157, 158[EG]	ERDS2TJ102	1K	R279, 280	ERDS2TJ103	10K	R419, 420	ERDS2TJ332	3.3K	R708	ERDS2TJ271	270
R159, 160[EG]	ERDS2TJ102	1K	R281	ERDS2TJ103	10K	R501, 502	ERDS2TJ102	1K	R801	ERDS2TJ102	1K
R201	ERDS2TJ684	680K	R282	ERDS2TJ563	56K	R503, 504	ERDS2TJ393	39K	R802	ERDS2TJ470	47
R202, 203	ERDS2TJ224	220K	R283	ERDS2TJ103	10K	R505, 506	ERDS2TJ822	8.2K	R803	ERDS2TJ103	10K
R204	ERDS2TJ224	220K	R284	ERDS2TJ333	33K	R507, 508	ERDS2TJ124	120K	R804	ERDS2TJ101	100
R205	ERDS2TJ123	12K	R285	ERDS2TJ103	10K	R509, 510	ERDS2TJ470	47	R805	ERDS2TJ223	22K
R206	ERDS2TJ224	220K	R286	ERDS2TJ472	4.7K	R512	ERDS2TJ473	47K	R901, 902	ERDS2TJ474	470K
R207	ERDS2TJ394	390K	R290	ERDS2TJ473	47K	R513	ERDS2TJ824	820K	R903, 904	ERDS2TJ103	10K
R208	ERDS2TJ103	10K	R291	ERDS2TJ102	1K	R514	ERD25TJ123	12K	R905, 906	ERDS2TJ103	10K
R209	ERDS2TJ474	470K	R292, 293	ERD25TJ332	3.3K	R515	ERG2ANJ152	1.5K	R907, 908	ERDS2TJ330	33
R215	ERDS2TJ684	680K	R294	ERD25TJ103	10K	R517, 518	ERG2ANJ331	330	R909, 910	ERDS2TJ330	33
R216	ERDS2TJ153	15K	R295	ERD25TJ472	4.7K	R519, 520	ERDS1FJ4R7	4.7			
R221, 222	ERDS2TJ471	470				R521	ERD25FJ470	47			
R226, 227	ERDS2TJ472	4.7K				R522	ERDS2TJ822	8.2K			
R228, 229	ERDS2TJ472	4.7K				R551, 552	ERDS2TJ223	22K			
R251, 252	ERDS2TJ681	680				R553, 554	ERDS2TJ223	22K			
R253, 254	ERDS2TJ681	680				R555, 556	ERDS2TJ392	3.9K			
R255, 256	ERDS2TJ681	680				R602	ERG2ANJ100	10			
R257, 258	ERDS2TJ681	680				R603	ERG2ANJ222	2.2K			
R259	ERDS2TJ681	680				R604	ERD25FJ681	680			

## CAPACITORS


Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value	Ref. No.	Part No.	Value
C1	ECKD1H471KB	470P	C201	ECEA1CU101	100	C403, 404	ECKD1H391K	390P	C551	ECEA1CU100	10
C2	ECKD1H121KB	120P	C202	ECEA1CK100	10	C405, 406	ECKD1H331KB	330P	C601, 602	ECES1JU682U	6800
C3	ECEA0JK101	100	C203	ECFTD563KXL	0.056	C407, 408	ECED1H390K	39P	C604	ECEA1VU102	1000
C101, 102[EG]	ECED1H390K	39P	C204	ECEA1EK4R7	4.7	C409, 410	ECEA1CK100	10	C605	ECEA1EU101	100
C103, 104	ECED1H101K	100P	C205	ECEA1CK100	10	C413, 414	ECFTD123KXL	0.012	C606, 607	ECKD1H103ZF	0.01
C105, 106	ECKD1H102KB	0.001	C206	ECFTD1222KB	0.0022	C415, 416	ECFTD683KXL	0.068	C608	ECKD1H103ZF	0.01
C107, 108	ECEA0JU330	33	C208	ECEA1HU0R1	0.1	C417, 418	ECFTD562KXL	0.0056	C609	ECEA1U471J	470
C109, 110	ECFTD223KXL	0.022	C252	ECEA1HK010	0.01	C419, 420	ECFTD273KXL	0.027	C609, 610	ECQV1H471J	470P
C111, 112	ECFTD682KXL	0.0068	C253	ECEA1CK100	10	C501, 502	ECEA1HN3R3	3.3	C701	$\Delta$ ECKDKC103PF2	0.01
C113, 114	ECEA1HK010	1	C254	ECED1H820K	82P	C503, 504	ECKD1H681KB	680P	C702	ECEA1VU331	330
C115, 116	ECEA1CK100	10	C255	ECED1H680K	68P	C505, 506	ECKD1H561KB	560P	C801	ECEA1CK100	10
C117	ECKD1H103ZF	0.01	C256	ECEA1HKR22	0.22	C507, 508	ECED1H040C	4P	C802	ECEA1CK220	22
C151, 152[EG]	ECED1H180K	18P	C257	ECEA1HK010	1	C509, 510	ECEA1CU220	22	C803	ECEA1EK4R7	4.7
C153, 154[EG]	ECED1H151K	150P	C260	ECEA1CK220	22	C511, 512	ECFTD223KXL	0.022	C804	ECFTD473KXL	0.047
C155, 156[EG]	ECED1H101K	100P	C301, 302	ECEA1HK010	1	C513	ECEA0JU331	330	C805	ECKD1H471KB	470P
C157, 158[EG]	ECED1H101K	100P	C303, 304	ECFTD333KXL	0.033	C514	ECQV1H224J	0.22	C806	ECEA1CU470	47
C159, 160[EG]	ECED1H101K	100P	C305, 306	ECEA1EK3R3	3.3	C515	ECEA1HU330	33	C901, 902	ECKD1H103ZF	0.01
C161, 162[EG]	ECED1H101K	100P	C311, 312	ECEA1HK010	1	C518	ECKD1H103ZF	0.01	C903, 904	ECEA1CK100	10
C163, 164[EG]	ECKD1H103ZF	0.01	C401, 402	ECEA1EK4R7	4.7	C523	ECEA2AU100	10	C703	ECKD1H223ZF	0.022
C165, 166[EG]	ECKD1H103ZF	0.01									
C167, 168[EG]	ECKD1H223ZF	0.022									
C169, 170[EG]	ECKD1H223ZF	0.022									
C171, 172[EG]	ECKD1H221ZF	220P									
C173, 174[EG]	ECKD1H221ZF	220P									

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description						
INTEGRATED CIRCUITS																	
IC1	MN6013D	Remote Control	Q253	DTC124ESTP	Transistor	D231	LN463YCPP	L.E.D.	COILS								
IC101[EG]	M5220L	Equalizer	Q254	DTC114YSTP	Transistor	D232 ~ 235	LN363GCPP	L.E.D.	L1	ELEA101JA							
IC101[Other]	M5218L	Equalizer	Q255	DTC144ESTP	Transistor	D251 ~ 257	LN463YCPP	L.E.D.	L201 ~ 206	SLQ210G1-D							
IC201	LC7818	Input Selector	Q256 ~ 259, 551, 602, 701	2SC3311-Q	Transistor	D258	LN863RCPP	L.E.D.	L301, 302	ELEPH181KA							
IC251	LC6523C-3068	Micro Computer	Q260	DTA114ESTP	Transistor	D271	MA150LF	Diode	L501, 502	SLQY07G-40							
IC252	DN74LS145	BCD Decord	Q261	DTC114ESTP	Transistor	D301, 302	MA4068M	Diode	L601	SLQZ650MH49							
IC301	TC9177P	Attenuator	Q262	2SA992E	Transistor	D501, 703, 708 ~ 711	MA167	Diode	TRANSFORMERS								
IC302	M5218P	Buffer	Q501	2SA1309Q	Transistor	D601 ~ 604	$\Delta$ SVDS3V20	Diode	T1[EK, XL]	$\Delta$ SLT5P253							
IC401	M5218L	Tone	Q552	2SD1265-O	Transistor	D605, 606	$\Delta$ 1SR35200	Diode	T1[XA]	$\Delta$ SLT5P254-W							
IC501	SVI3105	Power Amp.	Q701[XA]	2SC1685-QNC	Transistor	D607	MA4051L	Diode	T1[Other]	$\Delta$ SLT5P252							
IC801	LA7224	Receiver	DIODES														
IC901, 902	SVIBA6144	Meter	D1	LN66	L.E.D., Remote Control Diode	D706	MA4140M	Diode	T701[XA]	$\Delta$ SLT5i25							
TRANSISTORS												D712	MA4082M	Diode	T701[Other]	$\Delta$ SLT5i24	
Q1	UN1231	Transistor	D201 ~ 203, 205, 206, 260 ~ 263, 265 ~ 268, 270, 551, 704, 714	MA165	L.E.D., Remote Control Diode	D801	MA4051M	Diode	T801	SLD9B3-Z							
Q206 ~ 208	2SK301-QRS	Transistor										D901 ~ 910	LN863RCPP	L.E.D.			
Q251, 252	2SA1309Q	Transistor															



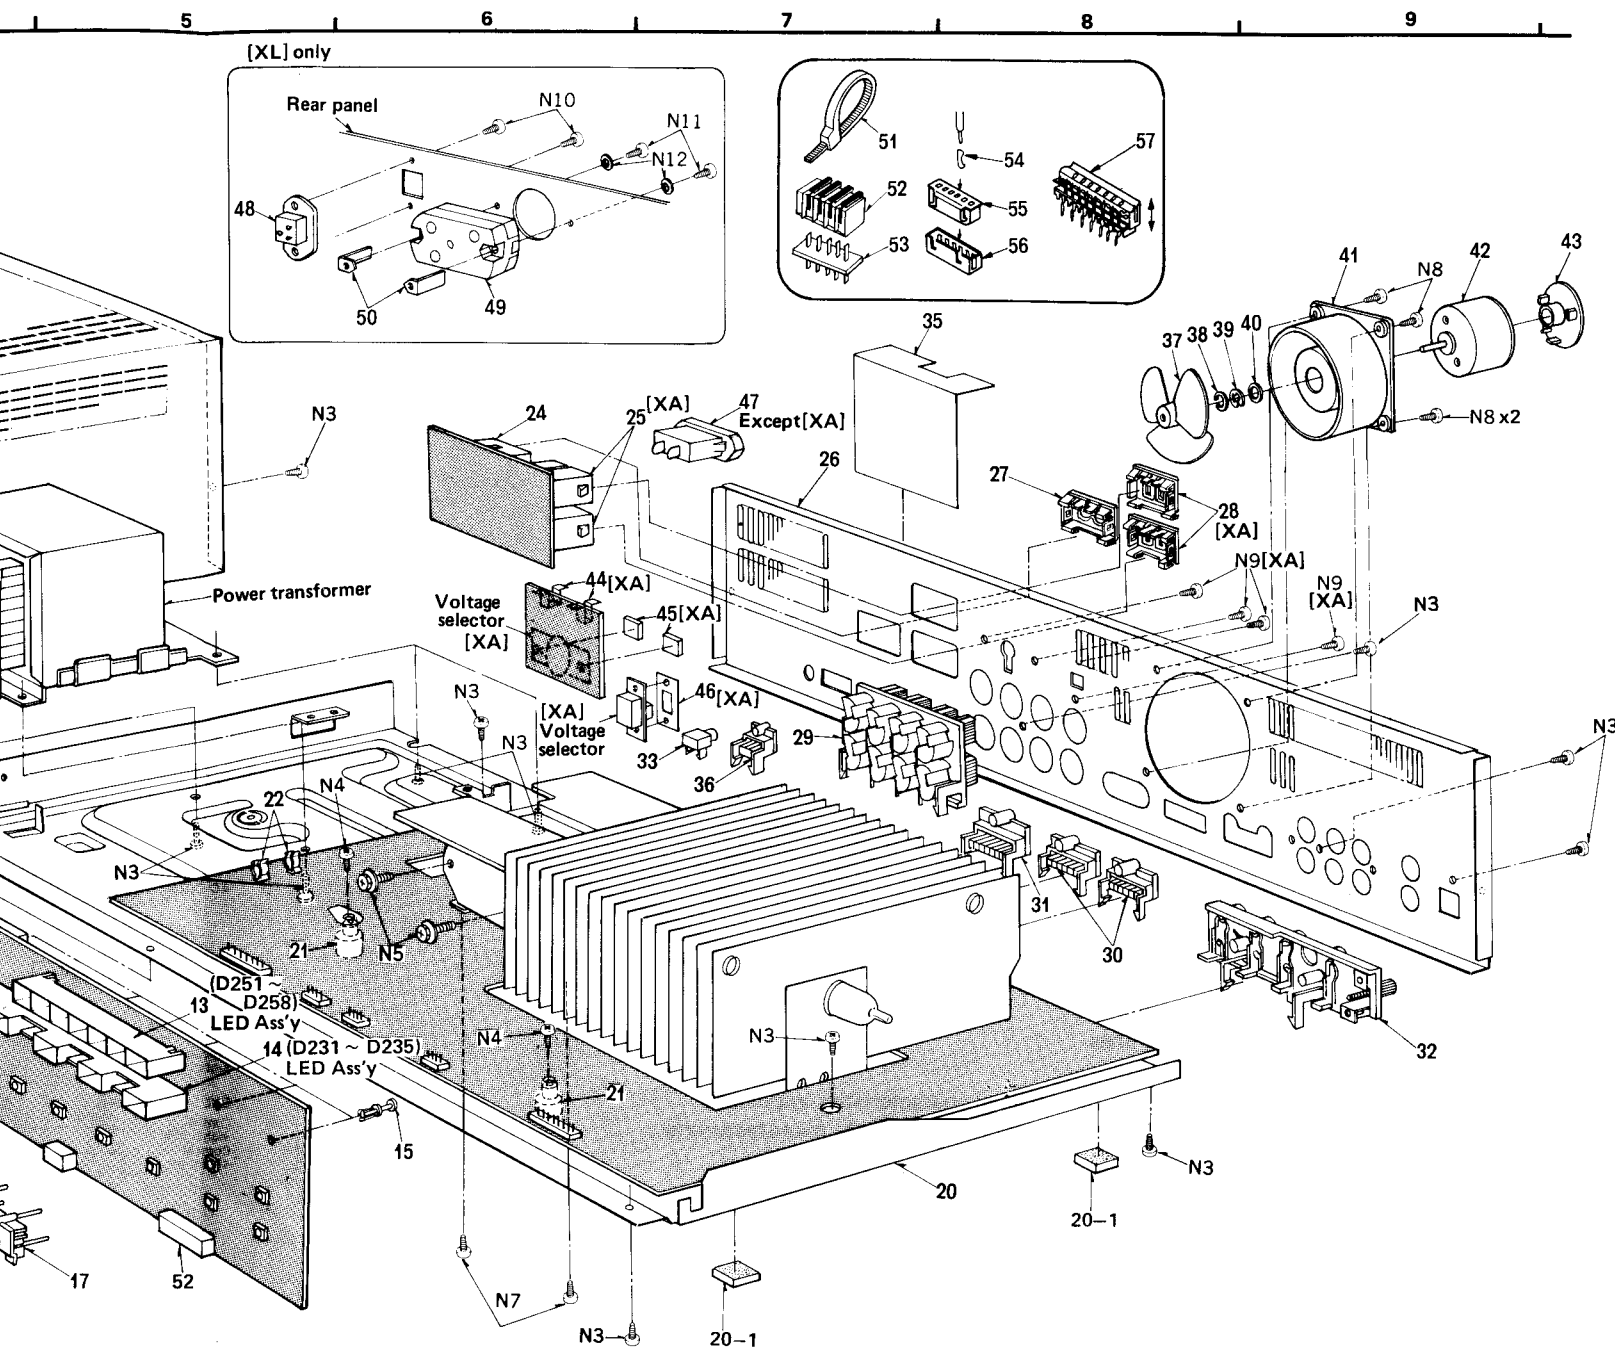

Remote Control Unit (Transmitter)

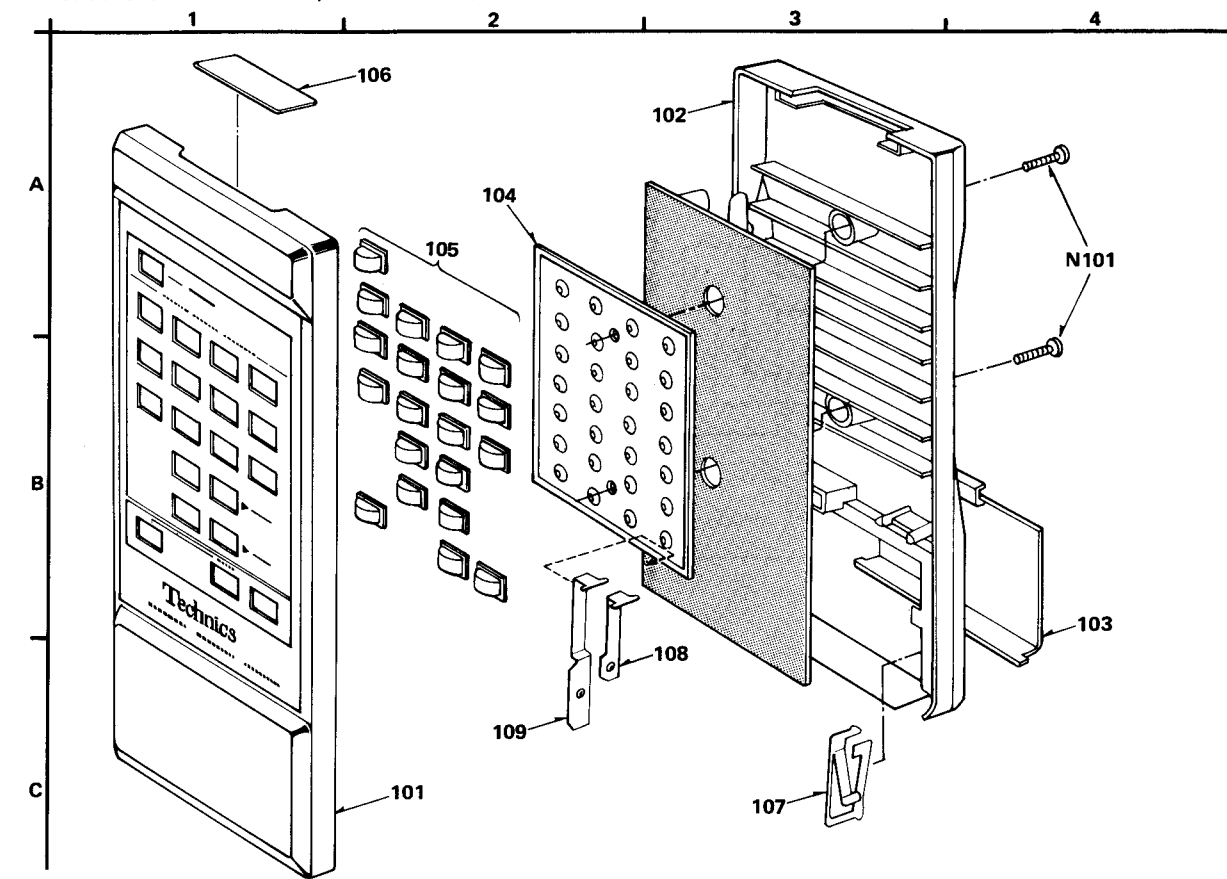

Ref.No.	Part No.	Description
<b>CABINET and CHASSIS PARTS</b>		
1	SGYUZ990-KE	Front Panel Ass'y (1)
2	SBN1032-4	Knob, Tone (2)
3	SBC666-3	Button, Power (1)
4	SMP412	Lamp Holder (1)
5	SMZ320	Reflection Plate, Lamp (1)
6 [EK]	SKCUZ990-KK	Cabinet Ass'y (1)
6 [Other]	SKC1950K992	Cabinet (1)
7	SJJ134B	Headphone Jack (1)
8	SBC315-7	Button, Speaker (2)
9	LN108326P	L.E.D. Ass'y (1)
10	SMC1223	Shield Case (1)
11	SHR9797	Holder (1)
12	SMC6406	Shield Plate (1)
13	LN074328P	L.E.D. Ass'y (1)
14	LN061330P	L.E.D. Ass'y (1)
15	SHR415	Nylon Pin (6)
16	SBC822	Button, Selector (1)
17	SBC823	Button, Balance (1)
18	SBC821	Button, Volume (1)
20	SKUUZ990-KC	Bottom Cover Ass'y (1)
[20-1]	[SKL293	Foot (4)
21	SHE187-1	Holder, P.C.B. (2)
22	SJT390	Fuse Holder (2)
23	LN012280P	LED Ass'y (1)
24 Except [XL]	SJS9231B	AC Inlet (1)
25 [XA]	SJS9232B	AC Outlet (2)
26 [E]	SGP6800-1A	Rear Panel (1)
26 [EG]	SGP6800-1B	Rear Panel (1)
26 [XA]	SGP6800-2A	Rear Panel (1)
26 [XL]	SGP6800-3A	Rear Panel (1)
26 [EK]	SGP6800-5A	Rear Panel (1)
26 [Other]	SGPUZ990-KF	Rear Panel (1)
27	SJS9231A	AC Inlet Cover (1)
28 [XA]	SJS9232A	AC Outlet Cover (2)
29	SJF4818-1	Speaker Terminal (1)
30	SJS804	Socket (2)
31	SJS604	Socket (1)
32	SJF3062-5N	Input Terminal (1)
33	SJJ130-1	Jack (1)
34	SMC1240	Shield Cover (1)
35	SMX920	Insulation Cover (1)
36	SJS306	Socket (1)
37	SHE174	Fan (1)

Ref.No.	Part No.	Description
38	SUS271	Ring Spring (1)
39	XUC2	E Ring (1)
40	SDX323	Spacer (1)
41	SMEUS09-KN	Motor Case (1)
42	MMNGC2RKMS	Motor (1)
43	SME97-1	Motor Case Cover (1)
44 [XA]	SJT388	Fuse Holder (2)
45 [XA]	SHE209	Spacer, Voltage Selector (2)
46 [XA]	SHE208	Bake Plate, Voltage Selector (1)
47 [EK]	Δ SJS9227	AC Outlet (1)
47 Except [EK, XL, XA]	Δ SJS9225	AC Outlet (1)
48 [XL]	Δ SJS301	AC Inlet (1)
49 [XL]	Δ SJS9319	AC Outlet (1)
50 [XL]	Δ SUW2968	Bracket, AC Outlet (2)
51	SHR301	Clamper (1)
52	SJS5341	Connector, 3Pin (J2) (1)
52	SJS5533	Connector, 5Pin (J3,4) (2)
52	SJS5817	Connector, 8Pin (J1,13) (2)
53	SJT3311	Post, 3Pin (J2) (1)
53	SJT3505	Post, 5Pin (J3,4) (2)
53	SJT3805	Post, 8Pin (J1,13) (2)
54	SJT783	Connector Pin (2)
55	SJS5215	Connector (1)
56	SJT3213	Post (1)
57	SJT30543-V	Socket (1)
57	SJT30643-V	Socket (1)
<b>SCREWS</b>		
N1	SNE4021	Nut (1)
N2	XTB3+8G	Tapping, ⊕ 3x8 (2)
N3	XTB3+8JFZ1	Tapping, ⊕ 3x8 (19)
N4	XTB3+20B	Tapping, ⊕ 3x20 (2)
N5	SNE2118	Power IC (2)
N6	SNE2095-5	Cabinet (2)
N7	XTW3+8T	Tapping, ⊕ 3x8 (2)
N8	XTB3+10JFZ	Tapping, ⊕ 3x10 (4)
N9 [XA]	XYN3+C10FZ	Voltage Selector (4)
N10 [XL]	XTB3+10JFZ	AC Inlet (2)
N11 [XL]	XYN3+F16FZ	AC Outlet (2)
N12 [XL]	XWA3BFZ	Washer (2)

Ref.No.	Part No.	Description
<b>ACCESSORIES</b>		
A1 [EK]	Δ SFDAC05G02	AC Cord (1)
A1 [XL]	Δ SJA131	AC Cord (1)
A1 [XA]	Δ SJA168-1	AC Cord (1)
A1 [Other]	Δ SFDAC05E03	AC Cord (1)
A2	SJP2257	Cord, Player Remote Control (1)
A3 [EK]	SJP5219-1	Plug (1)
A4 [XA]	SJP9215	Plug Adaptor (1)
A5	SWKUZ990KM	Connection Cord (1)
A6	UM-3NEP-2P	Battery (2)
A7 [EK]	SQF12794	Instruction Book (1)
A7 [EG]	SQF12795	Instruction Book (1)
A7 [XA]	SQF12796	Instruction Book (1)
A7 [Ei]	SQF12797	Instruction Book (1)
A7 [Other]	SQF12793	Instruction Book (1)
<b>PACKING PARTS</b>		
P1 [EK]	SPG5723	Carton Box (1)
P1 [EF]	SPG5724	Carton Box (1)
P1 [Other]	SPG5722	Carton Box (1)
P2	SPS4751	Pad, Left (1)
P3	SPS4752	Pad, Right (1)
P4	SPS4716	Pad, Remote Control (1)
P5	SPP723	Polyethylene Sheet (1)

REMOTE CONTROL UNIT

Ref.No.	Part No.	Description
<b>CABINET and CHASSIS PARTS</b>		
101	UR64VCS116	Top Case Ass'y (1)
102	UR64VCS117	Bottom Case Ass'y (1)
103	UR64EC121	Battery Cover (1)
104	UR64CT122	Rubber Contact (1)
105	UR64BT123A	Button (20)
106	UR64SB125	Tinted Plate (1)
107	UR52TD101	Battery Terminal, ⊕, ⊖ (1)
108	UR64TD127	Battery Terminal, ⊕ (1)
109	UR64TD128	Battery Terminal, ⊖ (1)
<b>SCREW</b>		
N101	XTS26+12GFZ	Tapping, ⊕ 2.6 x 12 (2)

Ref.No.	Part No.	Description
<b>COILS</b>		
L1	ELEA101JA	Coil
L201~206	SLQZ10G1-D	Coil
L301, 302	ELEPH181KA	Coil
L501, 502	SLQY07G-40	Coil
L601	SLQZ650MH49	Coil
<b>TRANSFORMERS</b>		
T1 [EK, XL]	Δ SLT5P253	Power Transformer
T1 [XA]	Δ SLT5P254-W	Power Transformer
T1 [Other]	Δ SLT5P252	Power Transformer
T701 [XA]	Δ SLT5i25	Transformer Stand by
T701 [Other]	Δ SLT5i24	Transformer Stand by
T801	SLD9B3-Z	Coil
<b>CRYSTALS</b>		
X1	CSB420PB1	420kHz
X251	SVFCSA400MG	4MHz
<b>VARIABLE RESISTORS</b>		
VR401, 402	EWC2XA020C15	Bass/Treble
<b>LAMP</b>		
PL601	Δ XAMS6Q17C	Panel Light
<b>FUSES</b>		
F1 [EK]	Δ XBA2C20TBO	250V, T2A
F1 [XA]	Δ XBA2C40TRO	250V, T4A
F1 [Other]	Δ XBA2C20TRO	250V, T2A
F2 [XA]	Δ XBA2C20TRO	250V, T2A
<b>SWITCHES</b>		
S201~205, 251~255	SSG13	Key
S256	Δ SSH1159	Power Speaker
S501, 502	SSH2113	Speaker
S702 [XA]	Δ ESE37263	Voltage Selector (Rotary Type)
S703 [XA]	Δ ESD391085	Voltage Selector (Side Type)
<b>RELAYS</b>		
RLY501	SSY126	Speaker Power
RLY701	Δ SSY123	Speaker Power
<b>BATTERY</b>		
BAT1	BR2325-1VC	Lithium Battery